


# The CW Machine

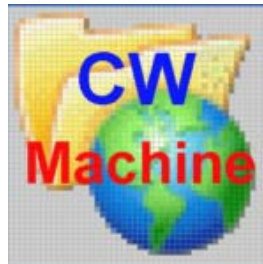

# Contents

Introduction .....	4
Morse Timing and Speed.....	5
The CW Machine Hardware Configurations.....	6
Where is the Power Switch? .....	7
Serial Communication.....	7
Loading the Firmware .....	8
Automatic Call Detection and Logging .....	9
Using the CW Machine with Logging Programs.....	10
The Menu System.....	11
Adjusting the LCD Contrast .....	12
Getting Started.....	13
Adjustments Using the Menu System .....	14
Setting Your Own Call, Name, and QTH [ . , Enter, +] .....	14
Setting the Serial Communication Speed.....	14
Adjusting the Time.....	15
Adjusting the Date .....	15
Setting the Keying Mode, SSB Mode, or COMKEY Mode.....	16
Displaying and Decoding the Keyer Output.....	17
Enabling/Disabling the Dash/Dot Memory (-/. MEM) .....	18
Adjusting the Morse Speed Range.....	18
Switching the Log Search On or Off (SEARCH).....	19
Switching Automatic Logging On or Off (A-LOG) .....	19
Switching the Tone On or Off (TONE).....	19
Changing Volume and Pitch of the Sidetone (SOUND).....	20
Toggling the Key Orientation (REVRSE).....	20
Toggling Automatic Character Spacing (AUTOCS).....	20
Toggling Automatic Word Spacing (AUTOWS) .....	21
T/R Compensation and Weighting (COMP) .....	21
The Contest Option (CONTST) .....	22
Serial Numbers.....	22
Uploading the Log to your PC in ADIF Format .....	23
Loading the Settings File .....	24
Exporting your Log to the PC .....	24
Importing Log Data from the PC.....	25
Selecting the Band .....	26
The Tuning Functions.....	26
Displaying and Resetting the Record Count.....	26
Adjustments using the Pseudo Prosign <dm> or the Esc Key .....	28
Resetting the Keyer.....	29
The Log.....	30
The Log Records.....	30
Entering CALL, NAME, QTH, COMMENT and QSL_VIA.....	31
Characters With Special Behavior.....	32
Duplicate QSOs.....	33

Checking, Erasing or Editing the last QSO in the Log: The <do> Pseudo Prosign and Scroll Key .....	34
The Settings File .....	35
National Language Characters.....	37
Prosigns and Commands in Messages .....	38
- = .....	38
- > .....	38
- + .....	38
- ( .....	38
- &.....	38
- %.....	38
- ^.....	38
- # .....	38
- \A.....	39
- \B.....	39
- \C.....	39
- \D.....	39
- \Gn.....	40
- \Hn.....	40
- \I .....	40
- \Jn.....	40
- \Knnn .....	40
- \L .....	40
- \M .....	40
- \N.....	41
- \O.....	41
- \P[s][% & ^] .....	41
- \Q[s][%].....	41
- \Rnn .....	42
- \S .....	42
- \T .....	42
- \U.....	42
- \Wnnn .....	42
- \Z .....	42
Keypad and Keyboard Functions .....	43
Switching the Keying Function On or Off [ NumLock ].....	44
Entering the Sent Signal Report for SSB [ NumLock ].....	44
Toggleing the User [ / ].....	45
Entering the Received Serial Number [ / ] .....	45
Entering the Received Signal Report [ * ].....	46
Starting or Queuing a Message [ 0 ... 9 ] .....	46
Interrupting and Resuming a Message [ . ].....	46
Sending Your Own Call [ . ].....	47
Starting the 10 Minute Id Timer [ . ] .....	47
Cancelling Messages and Clearing the Log [ -, ESC, NumLock].....	47
Entering and Checking the Call of the Other Station [ Enter ] .....	48

Entering the Name or Other Information [ + ] .....	48
Those Multi-Function Keypad Keys ... ..	50
Embedding of Messages .....	50
On the Air .....	52
Non-Contest Usage .....	52
QSO with You Calling CQ.....	52
QSO with You Responding to a CQ.....	54
Jumping into a Pile-Up.....	55
Contest Usage.....	57
You Sit on a Frequency .....	57
You Hunt.....	58
Non-Numeric Contest Exchanges.....	60
Appendix A: Error Codes .....	61
Appendix B: The Export / Import File Format.....	62
Appendix C: The Menu Structure.....	64

## Introduction

The **CW Machine** is firmware designed exclusively for the **CW Machine Hardware** platform. It combines the functions of a full featured CW memory keyer and a fully automatic QSO logger with scanning for duplicate QSOs.

Some features of this keyer are:

- Calibrated speed range from 5wpm to 75wpm
- Iambic A / B mode, emulation of a mechanical bug, straight key support
- Comfortable keyboard keyer functions using a PS/2 keyboard
- More than 12,600 bytes of memory for 30 standard messages without a limitation on the length of an individual message.
- Special commands in messages to control message repetition, local speed-up, insertion of names and calls, insertion of serial numbers, programmed breaks with resume, and more
- Memory for 12,000 QSOs with automatic detection of a previous QSO.
- Uploading of the QSO log in ADIF format to a PC.
- Automatic serial numbering up to 999,999
- Real time clock / calendar function with a backup battery
- Pulse or key-down tuning function
- Special commands for beacon and measurement purposes
- Logging of SSB QSOs using a keyboard or a key for data entry
- 10 minute id timer for SSB

All settings, messages, and the log are kept in non-volatile memory and will be retained even if power, including the backup battery, is completely removed.

The selection of various features and functions is accomplished in an intuitive way with a joystick and through messages and values displayed on the LCD display of the CW Machine Hardware.

CW characters can be created using a PS/2 keyboard or a dual lever paddle or a straight key. A dual lever paddle can use iambic modes A or B, or it can simulate a mechanical bug with manual creation of dashes.

A numeric keypad or a standard 101-key PC keyboard are required for many functions. Also, a PC with a serial interface is required to load various settings and to receive a copy of the log in ADIF format.

The features of the keyer are designed to allow operation in various hardware configurations with or without a paddle, numeric keypad, or keyboard, as explained below.

## Morse Timing and Speed

The CW Machine uses the speed potentiometer of the CW Machine Hardware to adjust the speed. It has no provisions to alter the timing characteristics of Morse signals, except to compensate for keying deficiencies of your transmitter, and, quite intentionally, uses the purist's definition of Morse code when sending predefined messages.

Morse code consists of short and long **elements** separated by an **elementary space**. Elements and elementary spaces are strung together to form **characters** separated by **character spaces**. Characters and character spaces are strung together to form **words** separated by **word spaces**. There is a precise definition of the timing relationships between all of these, and only signals that conform to these timing specifications are truly Morse code – everything else that deviates from these specifications may sound like Morse, but it really isn't from a purist's point of view. For training purposes some of these timing relationships are often adjusted, but at the end of the day you should strive to come as close as possible to the theoretical ideal, and the often heard argument that some other timing characteristics “sound better” is just a euphemism for sending a signal that “kinda sounds like Morse” when it really isn't.

The time is measured in an elementary unit that we will call **tick** here (this is not a standard term). So this is the precise definition of Morse code:

- A **dot** is a sound of one tick in duration, followed by a silence of one tick.
- A **dash** is a sound of three ticks in duration, followed by a silence of one tick
- A **character space** is an additional silence of two ticks after the preceding dash or dot. Since the dash or dot already ends with one tick of silence, as defined above, the silence between the sounds of two successive characters has duration of three ticks.
- A **word space** is an additional silence of four ticks in duration after the preceding character. Since a character already ends with three ticks of silence, as defined above, the silence between the sounds of two successive words has duration of seven ticks.

**Morse speed** is often measured in **words per minute (wpm)**. The accepted standard is that a “word” has a length of 50 ticks, including the trailing word space. If you add the duration of the letters, the character spaces, and the trailing word space as defined above, you will see that the word PARIS takes 50 ticks, and it is often used as the “standard” word for calibration purposes.

The speed potentiometer on the CW Machine Hardware is used to adjust the speed, and it is calculated and displayed many times per second using various settings of the CW Machine as input.

## The CW Machine Hardware Configurations

The **CW Machine** is designed to be operated in several configurations that let you choose the amount of “baggage” that you want to attach to the **CW Machine Hardware**. Please refer to the documentation of the CW Machine Hardware for a detailed description of the hardware and the various connectors that are used to attach keyboards / keypads, paddles, transmitters, PCs, and other devices to it. When we refer to the “CW Machine” here, we are talking about the features and functions of the firmware that runs on the CW Machine Hardware.

- You can operate with just a paddle or straight key attached to the CW Machine Hardware. In this case the CW Machine is just a regular keyer, and you cannot invoke the messages stored in memory. In an extreme case you could even operate without a key because the joystick acts like a paddle, although by moving it up/down rather than sideways – this obviously is not suitable for QRQ operation.
- You should attach the numeric keypad that comes with the device. This gives you the full functionality in a compact configuration. All text that has to be entered, e.g., the call of the other station or the name of the other operator, has to be entered with the paddle or straight key. There is a “silent mode” switch that lets you turn off the keyer output while you are entering text that should not go out on the air. (In SSB mode the keying function is always off, and you can use a paddle to enter information without explicitly switching to “silent mode”.)
- You can attach a PS/2 keyboard with a numeric keypad instead of just the numeric keypad. In this case you don’t need a paddle. The CW Machine will work as a comfortable keyboard keyer with a 100-character type-ahead buffer and sophisticated message chaining functions. You can, of course, attach a paddle at the same time and use just part of the functionality provided by the keyboard.

You can attach the CW Machine Hardware with a serial cable to a Windows PC running our **CW Machine Manager** program. It provides keyboard keyer functionality that is similar to a directly attached keyboard, it also lets you perform all the configuration and adjustment functions from a convenient graphical interface, and it gives you a running display of your transmission and the status of the CW Machine.

## Where is the Power Switch?

That's an easy one: The CW Machine device does not have a dedicated power switch. It is usually powered by an external power supply that can deliver 150mA or more at 9-15V DC. In addition it has a 9V battery that can power the device in full operation for extended periods if external power fails or is not available. If you are using a new alkaline battery, the typical life time can be expected to be around 30 hours or more, depending on the application and your operational pattern.

When the device is not in use it is best to remove the battery. In normal operation the CW Machine draws less than 20mA. The lowest current drain is achieved when you push the Reset button and the LCD screen goes blank; in this state the current drain, although not zero, is below 10mA, which a 9V alkaline battery can provide for more than 60 hours.

When you first connect a power supply or a battery, the LCD display will be blank. **You start the firmware application by touching the left side of your paddle (or by moving the joystick up).**

## Serial Communication

If your PC does not have a serial port, you can use a high-quality **USB-serial adapter**. It should be mapped to **COM1 ... COM4**. Many inexpensive adapters have proven problematic, and the only types that have worked consistently at full speed without problems are the adapter that we are offering and adapters made by Keyspan, e.g. the **Keyspan USA-19HS**.

The serial connector on the CW Machine Hardware is used for two purposes:

- It lets you load firmware into the keyer. This is typically done using the boot loader that comes with the AVR Butterfly board and the AVRprog program for Windows. (similar programs are available for other PC operating systems) This function automatically adjusts the settings of the serial port and the settings described below are not relevant for it.
- It lets the firmware exchange data with programs running on a PC. A typical example is the Settings file that you can load into the CW Machine.

All of our firmware programs will support communication with a terminal program on a PC, although more convenient Windows programs may be available to complement the functions of a particular firmware. A typical example is our **CW Machine Manager** program, which simplifies and extends the operation of the

CW Machine if you are running a Windows PC; **if you are using it the communications settings automatically established.**

If you are using a terminal program, however, it has to understand XON/XOFF flow control, and it has to support one of the communication speeds that you can select in the firmware. The speed is normally set to 38,400 baud.

You have to set the communication parameters in your terminal program as follows:

- 8 data bits, no parity, 1 stop bit
- XON/XOFF flow control
- Uncheck (disable) these options in the ASCII Sending section:
  - *Send line ends with line feeds*
  - *Echo characters locally*
- Set the line delay and the character delay both to 0 milliseconds
- Make sure to set the ASCII Receiving parameters to:
  - *Enable Append line feeds to incoming line ends (check the box)*
  - *Disable Force incoming 7-bit ASCII (uncheck the box)*
  - *Enable Wrap lines that exceed terminal width (check the box)*

## Loading the Firmware

The CW Machine Hardware comes loaded with the firmware for the CW Machine keyer. So, normally you won't have to do anything to start using the CW Machine. If you have loaded some other firmware into the CW Machine Hardware, however, you will have to reload the CW Machine firmware. It is contained in a file called **KeyLargo.hex**, and the procedure to load it is described in the documentation for the CW Machine Hardware.

The communication settings described above are not relevant for this process. **However, the port has to be COM1 ... COM4. The AVRprog program that is used to update the firmware will not work with ports above COM4.**

When you first connect a power supply or a battery, the LCD display will be blank. **To start the firmware application, touch the left side of your paddle (or move the joystick up).**

## Automatic Call Detection and Logging

If automatic logging is enabled, the CW Machine will analyze your outgoing transmission for the call sign of the other station. A call sign can contain numbers, letters, and the “/” (forward slash). It has to have at least 4 characters, it cannot start with a “/”, it cannot end with a number or a “/”, it must have a letter in the first two characters, and within the first three characters there must be at least one letter and one number or a “/” (forward slash). In other words, it has to be a typical call sign with at least 4 characters. If you are communicating with a station that has a special call sign that does not fit the typical pattern, you have to tell the CW Machine explicitly by using the Enter key or the \C command in a message as described further down.

The CW Machine will look for your own call in the data stream – that’s why **it is important that you program your own call(s) into the device** as explained further down. If your own call is preceded by the word DE, it will determine if the word before that looks like a call sign, using the pattern explained above. If it detects a call sign, the CW Machine will start a new log record and search the log for a prior QSO with that station in the log (you can disable this automatic search with a menu function). Please take a look at the sections describing the Enter key and the \C command, which perform similar functions, and the description of what constitutes a QSO match. If a prior QSO is found the CW Machine beeps, and the name and the QTH of the other operator are immediately available and can be inserted into your outgoing messages by special commands.

For example, if your call is W2PO, and you are sending:

N2DE DE W2PO ....

N2DE would be treated as the call sign of another station. If you are sending:

TEST DE W2PO ...

TEST would not be considered a call sign because it does not match the pattern of a call sign. (no number or / in the first three characters)

Using this feature, a basic log record is created by just running a “normal” QSO. The record is stored when you send <sk> or use one of the other methods described further down. The record will contain start and end times, the call, the band, the mode (CW), and the RST that you sent (also automatically detected by the CW Machine). If you want to store other information like the name and the QTH of the other station, or the received RST, you have to “help” the CW Machine a bit by using some keys on the keypad, as described further down.

## Using the CW Machine with Logging Programs

Although the logging functions of the CW Machine are quite powerful and do not require a computer connection, you may want to use your favorite logging program to provide statistics or label printing. Normally this is done by uploading the log from the CW Machine into the logging program every now and then.

However, the CW Machine is also able to function as a mere keying device that leaves all the “intelligent” functions to another computer program. This is possible if your logging program can send ASCII characters to the serial port that the CW Machine is connected to, and the communication parameters are set as described above on both sides. You have to select the **COMKEY** mode of the CW Machine as described further down. In this mode the CW Machine acts as a keying device with a 100-character type-ahead buffer that translates characters that come in on the serial link into Morse code. In COMKEY mode all of the paddle and keypad / keyboard functions described in this document are disabled.

## The Menu System

You navigate the menus of the CW Machine by moving the joystick in one of five directions, left, right, away from you (called *up*), towards you (called *down*), or pressing it down like a button (called *push*).

The CW Machine has two basic modes called ***adjustment mode*** and ***operational mode***. In adjustment mode you make the various settings that establish the operational characteristics of the keyer, but you cannot create Morse signals. In operational mode you can create Morse signals and display certain information, but you cannot change settings except for the LCD contrast.

When it is first switched on, or after a reset, the keyer starts in operational mode as an iambic Mode B keyer – so you could start using it right away. But you should probably switch to adjustment mode to familiarize yourself with the many features and functions before using it.

The menu system of the keyer is organized into several rows and columns. Items in one row form a group of related functions – e.g. there is a row that contains all the items related to managing the memory contents of the keyer.

One of the rows, the one that displays time, date, speed, etc., will be referred to as the ***Home row*** in this documentation. The last item that you select in the Home row will be remembered, and when you return from another row back to the Home row, that item will be displayed.

One of the columns, the one that shows Tune, Option, Memory, etc., is referred to as the ***Home column*** in this documentation.

The menu choices in operational mode form a single row, which is similar to the Home row of adjustment mode. In operational mode the up and down joystick movements act like a Morse paddle. Moving the joystick up is equivalent to pressing the left paddle of a key, and moving the joystick down is equivalent to pressing the right paddle of a key – so, if you rotate the keyer by 90 degrees you could use the joystick as a paddle in an emergency situation.

In *operational mode* you can switch to *adjustment mode* by pushing the joystick down for more than 0.25 seconds until you hear a beep. **Operational mode is indicated by a down-arrow in the fifth position of the display** – so you should push the joystick and see the arrow disappear.

You can switch back *from adjustment mode to operational mode* in several ways:

- Push the joystick down on any display in the Home column that is not in the Home row. (i.e., Tune, Band, Option, or Memory)
- Press the left paddle of your key for about 0.5 seconds
- Move the joystick up and hold it for about 0.5 seconds
- Push any key on the numeric keypad or keyboard

You'll find a pictorial description of the whole menu system in the Appendix C.

If you are using the **CW Machine Manager** program, all of the adjustment functions that are described in the following chapters are conveniently handled from Windows screens.

## Adjusting the LCD Contrast

The LCD contrast is set to the maximum after a device reset or when the CW Machine is started for the first time. If you are viewing the display from an oblique angle, it may be clearer if you adjust the contrast to a lower value.

In operational mode, pushing in the joystick (like a button) briefly for less than 0.25 seconds cycles through the 16 possible settings for the LCD contrast with each push. (If you push for too long, the keyer will beep and enter adjustment mode, as described above.) The new **contrast value is persistent** – pushing the hardware Reset button or removing the power supply will not change the last contrast setting. A reset of the firmware, however, as explained in “Resetting the Keyer”, will restore the LCD contrast to the maximum value.

## Getting Started

When it is first switched on, the keyer starts with a scrolling version display. If you move the joystick or tap your paddle it switches to operational mode showing the time. **(If you push the joystick down for more than 0.5 sec while the version is being displayed it will perform a reset to recover from a corrupted EEPROM.)** Operational mode is indicated by a down-arrow in the fifth character position of the display. You'll also see an up-arrow in the second character position, which indicates that the keying function for your transmitter is enabled. You should hook up a numeric keypad or a keyboard and verify that it works by pressing the NumLock key a couple of times: you should see the up-arrow in position 2 of the display go on and off, indicating that keying your transmitter is enabled or disabled. (The other keys on the keypad are meaningless at this stage – if you pressed them and ended up with a blank display, press the Enter key) **It usually is not a good idea to “hot plug” the keyboard or keypad – so remove the power before plugging it in.** If the keypad does not respond, move the joystick to reset it. Toggle the keying function off by pressing the NumLock – the up-arrow in the second position of the display should disappear. Move and hold the joystick up, and you should hear a string of dots from the speaker, move and hold the joystick down, and you should hear a string of dashes. At this early stage of experimentation it is probably not a good idea to connect a live transmitter or transceiver :-).

Move the joystick left, and you should see the date display. Move it left again, and you should see the speed in wpm displayed, move it left again, and you'll see either an empty screen or some decoded Morse characters that you created with the joystick. Move it left one more time, and you should be back to the time display. You could have gone through the same displays in reverse order by moving the joystick right.

In operational mode you have a choice of various display options, some of which we just cycled through, but you cannot change a setting. The keyer will remember your last display selection for operational mode and return to it if you switch power off and back on. There are more choices than we just went through, depending on some other settings – a contester will probably want the serial number displayed most of the time. And if you are using the keyer a lot for keying practice, you probably want the decoder screen in sight most of the time.

If you have already hooked up a paddle, see that it produces dots and dashes. Depending on how you wired it, it may be reversed from what you expected – but there is a keyer adjustment to change that.

After this first excursion let's get serious and adjust a few things. So, navigate to the time display, push the joystick down briefly to make the down-arrow in position five of the LCD disappear, and you are in adjustment mode.

## Adjustments Using the Menu System

### ***Setting Your Own Call, Name, and QTH [ . , Enter, +]***

**Letting the keyer know your own call is important for many functions**, and it is one of the first things that you should do.

The call, name, and QTH for both users is normally established by parameters in a settings file, as described further down, or by loading a profile from the CW Machine Manager program. However, there is a way to program this information for both users that does not require a computer connection.

To enter or change the call, select the corresponding user with the “/” key on the keypad (you’ll see a small 1 or 2 alternating in the LCD display, indicating the current user), disable transmitter keying with the NumLock key (the up-arrow in the LCD disappears), send the new call sign with your paddle or the keyboard, **enter adjustment mode** by pushing the joystick down (the down arrow in the LCD display disappears), then press the “.” (**decimal point**) on the keypad. The keyer will respond with a beep and return to operational mode.

Our call, name, and QTH are limited to 20 characters each.

To enter or change your **name**, follow the same procedure, except that you press the **Enter key** on the keypad instead of the decimal point key. To enter or change your **QTH**, follow the same procedure, except that you press the “+” (**plus**) **key** on the keypad instead of the Enter key. A “-” (hyphen) in the name or QTH will be sent as a space when you use the \M and \L commands.

### ***Setting the Serial Communication Speed***

Initially the speed of the serial port is set to 38,400 baud, which can be sustained by most modern PC’s. However, if you experience a loss of data or corrupted data in serial communication, you should try a slower speed. If you are using a terminal program it has to be adjusted to the same speed. Our **CW Machine Manager** program will detect the speed automatically.

Move the joystick up or down until you see the OPTION row. Move the joystick left until you see 38.4 K (or 19.2 K, or 9.6 K, or 4.8 K). Move the joystick up or down to select the communication speed.

## ***Adjusting the Time***

Make sure you are in adjustment mode (no down arrow in position 5) in the Home row and see the time displayed. After a loss of power or a reset the clock restarts at 12:00:00. This is a 24-hour clock that will keep time accurately within seconds per day, which you will probably want to set for UTC time.

Push the joystick down to get the adjustment options. You'll first see a scrolling message that tells you that you are setting the clock, and then the HH hour display. If you move the joystick left or right you'll get to the MM minute display. There is no separate adjustment for the seconds - the clock will always start at :00 seconds after adjustment.

With either hours (HH) or minutes (MM) displayed, move the joystick up or down to change the setting one hour or minute at a time. There is no automatic repeat function if you hold the joystick in a particular position. Adjust the hours and minutes as required, and then push the joystick down. This starts the clock at :00 seconds of the hour and minute that you entered.

## ***Adjusting the Date***

Make sure you are in adjustment mode (no down arrow in position 5) in the Home row and see the date displayed. After a loss of power or a reset the calendar restarts on January 1<sup>st</sup> 2010. The date is displayed as Day-Month-Year and can be any date from 2001-2099.

Push the joystick down to get the adjustment options. You'll first see a scrolling message that tells you that you are setting the date, and then the YY year display. If you move the joystick left or right you'll get to the MM month and DD day displays.

With either the year (YY), or the month (MM), or the day (DD) displayed, move the joystick up or down to change the setting by one number at a time. There is no automatic repeat function if you hold the joystick in a particular position. Adjust the date as required, and then push the joystick down to set the date.

To avoid entry of invalid dates, changing the year always sets month and day to 01, and changing the month sets the day to 01. If you move the joystick down with a 01 shown for the month, it will cycle to 12. If you move the joystick down with a 01 shown for the day it will cycle to the last day of the month. So, setting a late date at the end of a year actually doesn't require many joystick movements.

## ***Setting the Keying Mode, SSB Mode, or COMKEY Mode***

Move the joystick up or down until you see the OPTION row. Move the joystick right or left until you see IAMB B (or IAMB A, or BUG, or HAND, or SSB A, or SSB B, or SSBUG, or COMKEY). Move the joystick up or down to cycle through IAMB A, IAMB B, BUG, SSB A, SSB B, SSBUG, and COMKEY.

Iambic modes A and B are used with single-lever and dual-lever paddles, and for single-lever paddles you can select either one. They differ in the way the final element of a Morse character is generated after you have squeezed both paddles together and then release them both. Typically this is a matter of personal preference determined by the mode you used when you initially started out with “squeeze” keys. Mode B, which was introduced later and requires more logic in a keyer, is a little more tolerant when you make subtle timing mistakes. A related feature is the dash/dot memory function described further down.

The BUG choice allows you to use a dual lever paddle to simulate a mechanical bug. The dots are generated automatically, but the dashes have to be formed manually. (Since the reverse function works for BUG, too, you even have a left-handed bug !)

The HAND choice allows you to use a straight key. The “hot” wire can be connected to either the tip or the ring of the stereo plug that goes into the CW Machine device. If a dual- or single-lever paddle is connected, it will act as a **sideswiper (cootie)** key in HAND mode.

**COMKEY** mode is for situations where you want to use a logging program or keyboard keyer program that is able to send text to the serial port of the CW Machine. **In COMKEY mode the paddle and keypad functions are disabled. The CW Machine acts as a keying device with a 100-character type-ahead buffer that translates characters that come in on the serial link into Morse code. In this mode the CW Machine Manager for Windows will not be able to connect to the device !**

If keying is enabled (this is toggled with the NumLock key on the keypad), and you are activating a key, there is an up arrow in position 1 of the LCD that will flicker in sync with your signal.

**In any of the SSB modes you will also see a down-arrow in the rightmost position of the LCD display.**

The SSB modes will disable transmitter keying, but you can enter the information for your SSB QSOs into the log using the paddle or a keyboard. SSB A/B refers to the iambic mode of the paddle (Iambic A/B), SSBUG to the BUG mode, when it is used as a data entry device for the log information for SSB QSO's.

## ***Displaying and Decoding the Keyer Output***

The CW Machine keeps the characters that you are creating with a paddle or a straight key in an internal buffer, the *decoder buffer*, which is shown as a “ticker tape” on the LCD display, and simultaneously in the Terminal window of the CW Machine Manager. The keyer logic uses this buffer to detect words in your outgoing transmission which are significant for the logging process.

To display the “ticker tape” on the LCD display in operational mode, navigate to the right of the speed display (or left of the date display) in the Home Row. Create a character with your paddle, or enter one on the keyboard if you have it attached, and it will appear as the rightmost character in the LCD display and simultaneously be sent to the PC through the serial cable.

The decoder logic that transforms the dits and dahs made with a dual-lever paddle into characters uses an algorithm that allows slight deviations from perfect timing. The specification of Morse code defines the space between elements within a character as 1 bit (= the length of a dit). The keyer logic will allow you to use up to 1.5 bits; this makes it easier to keep a character “together” at higher speeds. The standard space between words is defined as 7 bits, but many operators use a shorter word space, especially at slower speeds. Therefore the decoder algorithm accepts any pause of at least 5 bits as a word space.

If you are using a **straight key in HAND** mode, you still have to use the speed potentiometer to let the decoder logic know the approximate speed that you will be sending at. Since the messages stored in the keyer can still be activated with the keypad keys, it makes sense anyway to set the speed potentiometer to your approximate speed, so that they are not sent at a speed that is vastly different from your manually created signal. The decoder logic uses the setting of the speed potentiometer to distinguish between dits and dahs, and to decide whether a word space or character space should be inserted. Your actual transmission speed can vary significantly from the speed potentiometer setting, and your character formation can be quite “individual”, but if it deviates too much from the standard, you are going to see “garbage”. Just experiment a bit with the speed potentiometer until you see that your signal is properly decoded.

These relaxed timing requirements are a feature of the **decoder** logic only. The keyer itself does not alter your timing to enforce character or word spaces when you are sending unless you use the AUTOCS and AUTOWS options – you can be a little sloppy, and the decoder will still recognize what you are sending within reasonable margins. If you are sending a recorded message, however, the keyer will use the standard timing of the Morse code specification.

## ***Enabling/Disabling the Dash/Dot Memory (-/. MEM)***

Most modern keyers implement a dash and dot memory, and this feature is enabled in the CW Machine unless you switch it off. This function lets the keyer “remember” if you close a paddle contact while an element (dash/dot) is still in progress, and it will insert the corresponding element after the current one is finished. This lets you move your fingers a little bit “ahead of time” and improves the keying tolerance at higher speeds. This should not be confused with Iambic A/B modes, which determine how a character is ended. If you select Iambic A mode and disable the dash/dot memory you have in essence the keying characteristic of the early electronic keyers with little assisting logic to compensate for variations in your timing.

Move the joystick up or down until you see the OPTION row. Move the joystick right until you see -/. MEM. Move the joystick up (ON) or down (OFF) to enable or disable the dash/dot memory.

Since all choices in the OPTION row form a logical circle, you could also move the joystick left several times to get to the -/. MEM option.

## ***Adjusting the Morse Speed Range***

The keyer speed is determined by the position of the speed potentiometer and two settings that define the speed range that the potentiometer covers. While in adjustment mode, with the current speed being displayed in the Home row, push the joystick down. You get a “Speed Range” message, and then the LOW value of the speed potentiometer. Using left or right joystick movements cycles through the HI and LOW options. You can adjust either value up or down using joystick movements – but, of course, the LOW value cannot exceed the HI value, and the HI value cannot drop below the LOW value. Once you are satisfied push the joystick, which sets these speed values as the upper and lower boundaries for the potentiometer. The extreme values for the speed in this keyer are 5wpm at the lower end, and 75wpm at the high end.

If you change the HI or LOW setting, the actual speed is normally changed, too, because it reflects the relative position of the potentiometer between the two boundary values.

The actual speed of the keyer is determined with digital precision in increments of 1wpm as shown in the display, and it is calculated by reading the potentiometer position many times per second. Occasionally you may find the

potentiometer in a position that leads to flickering between two adjacent speed values, because the conversion of the analog potentiometer position to a digital value can fluctuate a bit between successive measurements. The actual speed would also jump around exactly as shown on the display, although this is may not be noticeable because 1wpm is a small change and the jump may happen between characters. To avoid this effect, however, you should move the potentiometer a bit until the display, and the actual speed, is stable.

### ***Switching the Log Search On or Off (SEARCH)***

If this feature is on, the CW Machine will search the log for a previous QSO when a new log record is created. This happens automatically if automatic logging is enabled (see next section) or when you hit the Enter key or use the \C command in a message. Searching the log may cause a brief delay of less than a second, depending on the size of your log, and during this time the paddle is “dead”. If this disrupts your normal pace too much you can turn this feature off. **When keying is disabled (in SSB mode or via the NumLock key), the Enter key will always cause a log search, even if this option is not enabled.**

Move the joystick up or down until you see the OPTION row. Move the joystick right until you see SEARCH. Move the joystick up (ON) or down (OFF) to enable or disable this feature.

### ***Switching Automatic Logging On or Off (A-LOG)***

If this feature is ON, the CW Machine scans your outgoing transmission and detects the call sign of other stations. When a call sign is initially detected, the CW Machine creates a new log record. If the SEARCH option is enabled, it also scans the log for a previous QSO with that station.

Move the joystick up or down until you see the OPTION row. Move the joystick right until you see A-LOG. Move the joystick up (ON) or down (OFF) to enable or disable this feature.

### ***Switching the Tone On or Off (TONE)***

This setting controls the generation of a sidetone for Morse signals if keying is **enabled** (on). If keying is off, i.e., when you have no side tone from your transmitter, the keyer will always create a tone. (You toggle keying on/off with the NumLock key on the keypad). The tone is available on a connector, and you

may want to patch it into the audio of your receiver. By default this setting is off, i.e., no sidetone is created when keying is on. The beep that the keyer uses to signal some events is always audible and not affected by this setting.

Move the joystick up or down until you see the OPTION row. Move the joystick right until you see TONE. Move the joystick up (ON) or down (OFF) to enable or disable the Morse tone.

Since all choices in the OPTION row form a logical circle, you could also move the joystick left several times to get to the TONE option.

### ***Changing Volume and Pitch of the Sidetone (SOUND)***

You can change the volume and the pitch of the sound that is used for the Morse sidetone. The volume setting also controls the volume of the beep that is used to signal some events.

Move the joystick up or down until you see the OPTION row. Move the joystick right until you see SOUND. Move the joystick up or down to go to the VOLUME or PITCH option. With either one, moving the joystick left or right alternates between VOLUME and PITCH, moving the joystick up or down changes the volume or pitch and you'll briefly hear the new sound. When you are satisfied with the sound settings, push the joystick, which will return you to SOUND.

Since all choices in the OPTION row form a logical circle, you could also move the joystick left several times to get to the SOUND option. .

### ***Toggling the Key Orientation (REVRSE)***

Move the joystick up or down until you see the OPTION row. Move the joystick right or left until you see REVRSE. Move the joystick up (ON) to reverse the paddle orientation, or down (OFF) to go back to "normal" orientation. Since there is no agreed standard how to wire a paddle, the terms normal and reverse have no special significance.

### ***Toggling Automatic Character Spacing (AUTOCS)***

Enabling this option ensures that the space between two successive characters is at least 3 ticks. Move the joystick up or down until you see the OPTION row.

Move the joystick right or left until you see AUTOCS. Move the joystick up (ON) to enable automatic character spacing, or down (OFF) to disable it.

### ***Toggling Automatic Word Spacing (AUTOWS)***

Enabling this option ensures that the space between two successive words is at least 7 ticks. Move the joystick up or down until you see the OPTION row. Move the joystick right or left until you see AUTOWS. Move the joystick up (ON) to enable automatic word spacing, or down (OFF) to disable it.

### ***T/R Compensation and Weighting (COMP)***

The purpose of the COMP feature is to compensate for deficiencies in your transmitter's keying. There are two typical issues which can both be compensated by the CW Machine. The first, sometimes found in transceivers or transmitter/receiver combinations that do not offer true QSK, is the shortening of the first element of the first character after your transceiver switches from receive to transmit mode. The CW Machine compensates for this by adding EXTRa time (in milliseconds) to the length of the first element. The keyer needs to know what the "first character" is, i.e., you have to tell it how long your transceiver stays in transmit mode after the last character before it goes to receive; you set this DLY value in seconds. Characters that are started while the transceiver is still (assumed to be) in transmit mode will not be altered.

The second issue is that some transmitters create "light" characters by not transmitting for the full key-down duration, reducing the time of every dit and dah and extending the space between the elements of a character. The CW Machine compensates for this by adding EXTRa time (in milliseconds) to every dit and dah and reducing the space between them by that same amount. You enable this type of weighting by setting the DLY time to 0.

When compensation is enabled, the sidetone of the keyer will sound the "normal" character timing and not reflect the altered timing – just like the signal should sound that comes out of your transmitter.

Move the joystick up or down until you see the OPTION row. Move the joystick right or left until you see COMP. As with several other options described above, you can disable the COMP option by setting it OFF (joystick down). If you move the joystick up you can cycle through the settings for EXT and DLY and adjust them up and down. To make entering the EXT values easier over a large range, the adjustment counts up in 10 millisecond steps, and down in 1 millisecond

steps. The delay is shown in tenths of a second and can be a maximum of 3.0 seconds.

When you enable this option by moving the joystick up after it was disabled (that's the default), the initial EXT is 10 milliseconds, and the DLY is 0.5 seconds. You'll have to experiment a bit to find the best settings for your transceiver.

## ***The Contest Option (CONTST)***

Move the joystick up or down until you see the OPTION row. Move the joystick left until you see CONTST. Move the joystick up (ON) or down (OFF) to enable or disable the contest option. Contest mode is indicated by an up arrow in position 5 of the LCD display.

The contest option affects the way the log is searched for duplicate QSOs, and it enables the display and adjustment of serial numbers. The rules for determining if a QSO is considered a duplicate are explained in the log section.

If the contest option is on, one of the display options in the Home row shows the next serial number. The Home row choice that shows QSO information for a previous QSO is not available in contest mode. If the contest option is off, serial numbers are not displayed or incremented when a log record is stored.

Since all choices in the OPTION row form a logical circle, you could also move the joystick right several times to get to the CONTST option.

## ***Serial Numbers***

Serial numbers are only displayed if the keyer is in contest mode as explained above. In this case there is a display in the Home row, just to the right of the time display, that shows the **next** serial number. In operational mode this number is incremented and the display updated as log records are stored, and decremented if log records are deleted in QSO edit mode. So, two of the most important pieces of information in a contest, the serial number and the time, are directly adjacent in operational mode.

The serial number is initially displayed as "N. 1". Once it exceeds 9999 the position of the "." after the N will be used for the fifth digit, and once it exceeds 99999, even the N will no longer be shown. So the maximum serial number is 999999, which should be enough even for a major DX expedition :-). Of course, the keyer can store only 12,000 QSOs in the log, but the serial numbering can keep counting up even though the log starts with its first record again. So you

could fill up the built-in log many times, upload it to a PC, delete the log in the keyer without affecting the serial number, and keep going all the way to a million QSOs.

You can reset the serial number at any time to 1 by pushing the joystick down in adjustment mode while the serial number is displayed. It will display “RESET?”. If you confirm with another joystick push, the serial number will be set to 1, any other movement of the joystick leaves the serial number as it is.

### ***Uploading the Log to your PC in ADIF Format***

ADIF is a widely supported file format for log information. Many contests encourage electronic submission of the log in ADIF format, and you may have a logging program that can read an ADIF file and provide you with statistics and listings that the CW Machine itself doesn't have. The keyer can export its log using ADIF tags, but it cannot import ADIF files. (The CW Machine Manager program, however, provides the ability to import ADIF files into the CW Machine.)

Make sure that you have your terminal program running with the settings described in the “Serial Communication” section and waiting to receive an ASCII file. If you are using HyperTerminal, this is the “Capture Text” option in the “Transfer” menu.

The amount of data that is uploaded to the PC is determined by two filter options. Initially the CW Machine uploads a combined log for both users. If you want to change this behavior you navigate to the MEMORY row and move the joystick right once to display the ADIF selection. If you move the joystick up it will briefly display **USR1+2**, meaning a combined log for both users. If you move the joystick down it will briefly display **USER x**, where x is the number of the current user, meaning only records created by the current user will be selected. This setting is stored in non-volatile memory and applies to all future uploads until you change it. The **USER x** filter stores the fact that you want the records for only one user, the current user, not both users – so if you change the current user with the “/” key on your keypad, the subset of the selected records will change.

To export your log in ADIF format you navigate to the MEMORY row and move the joystick right twice until you see the scrolling “Upload ADIF?” message. At this time you can select whether you want to export only **new** log entries that were created after the last upload (the default), or **all** log entries, possibly filtered by user. Move the joystick up, and the display will briefly show “ALL”, move the joystick down, and the display will briefly show “NEW”. This selection applies to the next upload only, and the keyer will revert to “NEW” when it is finished.

With the scrolling “Upload ADIF?” message in the display push the joystick down, the display will change to COMM, and the data will be sent to your PC and

also be displayed on the PC screen. When all records have been transmitted, you will see "O.K." on the LCD display. In HyperTerminal you would select the "Stop" function of "Capture Text" to close the file on your hard disk. During the transfer you can abort the transmission at any time by moving the joystick or touching the paddle.

A record that was recorded in non-contest mode will look similar to this:

```
<QSO_DATE:8>20050815<TIME_ON:6>220230<TIME_OFF:6>220949<MODE:2>CW<BAND:3>20M  
<CALL:5>DJ8GO<NAME:6>ULRICH<RST_RCVD:3>569<RST_SENT:3>579  
<OPERATOR:4>N2DE<NOTES:9>DUPLICATE<EOR>
```

The OPERATOR tag is used to identify user 1 or 2 by call. The actual call is **not** stored in the log record, and **if it has changed between the creation of the log record and the export to ADIF, the ADIF record will be incorrect.**

A record that was recorded in contest mode will look similar to this (if non-numeric information was entered, there would also be a COMMENT tag):

```
<QSO_DATE:8>20050807<TIME_ON:6>180011<MODE:2>CW<BAND:3>40M  
<CALL:4>AA2D<RST_RCVD:3>599<RST_SENT:3>599  
<SRX:6>000056<STX:6>000043<OPERATOR:6>PJ2BVU<EOR>
```

## ***Loading the Settings File***

The settings file is a regular ASCII file that can be created on your PC with an ASCII editor like Notepad or Wordpad. It is described in detail further down.

Make sure that you have your terminal program running with the settings described in the "Serial Communication" section. To load your settings file you navigate to the MEMORY row and move the joystick right until you see LOAD SETTINGS. Push the joystick down, and you'll see COMM (for communication) – the keyer is now waiting for a file from the PC, and you have about 30 seconds to get your terminal program to start the transmission. If you are using HyperTerminal, this is the "Send Textfile" option in the "Transfer" menu.

When all records have been received, you will see "O.K." on the LCD display.

In theory you could just type in all settings with your terminal program. This is not practical for most purposes, but changing the name or the call can easily be done that way.

## ***Exporting your Log to the PC***

You will probably want to export your log to a PC for potential restoration later on. It is good practice to make that backup every now and then, although the CW Machine Hardware retains the data even when the battery is removed, and you would have to physically damage it to lose the data. Another situation is before a contest, where you probably want to “clean out” all your regular QSOs and just have the contest data in the keyer for later submission in ADIF format. After the contest you can restore your “regular” log using the Import function.

Make sure that you have your terminal program running with the settings described in the “Serial Communication” section and waiting to receive an ASCII file. If you are using HyperTerminal, this is the “Capture Text” option in the “Transfer” menu.

To export your log you navigate to the MEMORY row and move the joystick left until you see EXPORT.

You push the joystick down, the display will change to COMM, and the data will be sent to your PC and also be displayed on the PC screen. When all records have been transmitted, you will see “O.K.” on the LCD display. In HyperTerminal you would select the “Stop” function of “Capture Text” to actually write the file to your hard disk. During the transfer you can abort the transmission at any time by moving the joystick or touching the paddle.

### ***Importing Log Data from the PC***

A log file that has been exported to the PC, or any other file that has the exact layout described in Appendix B, can be imported to (re-) create your log. If you are using a logging program and would like to import that log into the CW Machine, you will have to convert its data to the format described in Appendix B. This requires programming experience and knowledge of the data structure used by that logging program.

Make sure that you have your terminal program running with the settings described in the “Serial Communication” section. To import your log you navigate to the MEMORY row and move the joystick left until you see IMPORT. Push the joystick down, and you’ll see COMM (for communication) – the keyer is now waiting for a file from the PC, and you have about 30 seconds to get your terminal program to start the transmission. If you are using HyperTerminal, this is the “Send Textfile” option in the “Transfer” menu.

When all records have been received, you will see “O.K.” on the LCD display. If any discrepancies, i.e. deviations to the file format described in Appendix B, are discovered, you’ll get an ERR 05, and the record count will be reset to 0.

**At the maximum communication speed of 38,400 baud importing or exporting 12,000 records takes about 5 minutes.**

### ***Selecting the Band***

From the Home row, move the joystick up once to display the current band (the initial setting after a reset is 20m) Move the joystick right or left to select your current band that will be recorded in the log. **The band can also be selected using the <dm> pseudo prosign or the Esc key of a keyboard as described further down.**

### ***The Tuning Functions***

From the Home row, move the joystick up twice to display the TUNING function. Move the joystick right to get a continuous key down. Moving the joystick left will create a rapid pulse chain with a 33% duty cycle. Once either tuning mode is active, any movement of the joystick, or touching your paddle, or pressing a key on the keypad or ESC on a keyboard will end it. **The tuning functions can also be activated using the <dm> pseudo prosign or the Esc key of a keyboard as described further down.**

This function is available in CW and SSB modes. You probably have to put your transmitter into CW mode to tune up this way for SSB operation.

### ***Displaying and Resetting the Record Count***

The keyer stores up to 12,000 log records in non-volatile memory (the contents of these records and how they are stored is described further down). You can display the number of records in the log to see if you are running out of capacity, and you can erase the log by resetting the number to 0.

Navigate to the MEMORY row and move the joystick left until you see Rxxxxx (where xxxxx is a number between 0 and 12000). This is the number of records currently in the log. If you push the joystick down it will display "ERASE LOG?". If you confirm with another push of the joystick the number of records will be set to 0, which means **the log is permanently erased – so be careful!** Any other movement of the joystick leaves the log unchanged.

**Resetting the log does not affect the serial number count.**



## ***Adjustments using the Pseudo Prosign <dm> or the Esc Key***

Some of the more frequently used configuration functions described in the previous sections can be accomplished without going through the menu functions or using the joystick. If you enter the pseudo prosign **<dm>** (**-.-- sent as one character**) with your paddle or press the **Esc** key on a directly attached keyboard the next character that you enter with your paddle or the keyboard will be interpreted as a command to change a configuration setting.

The following characters will change the **band** setting:

**0** = 2m      **1** = 4m      **2** = 6m      **3** = 10m      **4** = 12m      **5** = 15m  
**6** = 17m      **7** = 20m      **8** = 30m      **9** = 40m      **A** = 60m      **B** = 80m  
**C** = 160m

The letters **S** and **W** will toggle between equivalent SSB and CW **keying modes**:

**S** = switch to **SSB**

**W** =switch to **CW**

Equivalent means:

IAMB A <-> SSB A      IAMB B <-> SSB B      BUG <-> SSBUG

Since HAND keying is not supported for SSB, the S command is ignored if you are in HAND mode.

The letter **D** will rotate through the various LCD **D**isplay options (time, date, speed, etc.) in operational mode. It is equivalent to moving the joystick left.

The letters **T** and **P** activate the **tuning** functions:

**T** = key down tuning

**P** = pulse tuning

The tuning modes are ended when you touch your paddle or press the Esc key on the directly attached keyboard again.

The keyer will confirm a new setting with a beep. Any other character after the pseudo prosign <dm> or the Esc key will be ignored and cancels this special command mode. If you have entered <dm> by mistake with your paddle, it's probably easiest to hit the dot paddle for E to cancel command mode. If you have pressed the Esc key by mistake, use any letter that has no assigned function.

## ***Resetting the Keyer***

Pushing the reset button (a **hardware reset**) of the keyer puts it into “deep sleep” with almost all functions disabled, and you can only wake it up by moving the joystick up. When it wakes up, however, the keyer firmware essentially resumes in the same state that it was in before. In other words, a hardware reset does not result in a **firmware reset**. (however, the clock / calendar is reset to to January 1<sup>st</sup>, 2008, 12:00:00 !)

Occasionally it may be necessary to reset the keyer and its internal variables to the default configuration settings, and there are two types of reset operation that you can initiate by pushing the joystick (like a button) while the version display scrolls across the screen after the keyer has been started. You can always get to the scrolling version display by pressing the (hardware) reset button on the keyer, and then moving the joystick up.

If you push the joystick briefly, you will see **RESET** on the screen, and then you are returned to the scrolling version display. This has reset the internal variables to their default settings. However, any information that was loaded by a settings file (messages, calls, names, QTHs) remains intact.

If you keep the joystick pushed for more than 0.5 seconds while the version display scrolls across the screen, you will see **ERASE** followed by **RESET**. This erases all settings information (**messages, calls, names, QTHs**) and then resets the internal variables. This full reset is done automatically every time a new major firmware version is loaded.

Either type of reset **does not erase the QSO log**. If you want to put the keyer back into original factory condition, you would have to use the **ERASE** type reset and reset the log record count to 0 as described above.

# The Log

## *The Log Records*

The log contains up to 12,000 entries recording the following information. The ADIF tag that will be used when exporting the log to your PC is also shown:

- <QSO\_DATE> : the date of the QSO as established by the \C or \T commands in recorded messages, or the date that the log entry was started by entering the call with the Enter key. Only two digits are actually stored in the log. Dates with a year larger than 69 will be considered 19xx, while a year up to 69 is interpreted as 20xx.
- < TIME\_ON> : the start time of the QSO as established by the \C or \T commands in recorded messages, or the time that the log entry was started by entering the call with the Enter key.
- < TIME\_OFF> : the end time of the QSO - actually the time that the log entry was written at the end of the QSO. This is only recorded if you are not in contest mode. Contest QSOs are usually very short, so that the start time is sufficient. (internally this uses the same storage location as the serial numbers – so these are mutually exclusive alternatives)
- <CALL>: the other station's call up to 13 characters.
- <NAME>: the other operators name or <QSL\_VIA>/<COMMENT> information. See explanation further below.
- <QTH>: the other operators QTH or <QSL\_VIA>/<COMMENT> information. See explanation further below.
- <BAND>: the band
- <MODE>: CW or SSB
- <RST\_RCVD>: signal report received, defaults to 599 (59 for SSB)
- <RST\_SENT>: signal report sent, defaults to 599 (59 for SSB). Any 3 ( or 2 for SSB) digits with a first digit between 1 and 5, and two (one for SSB) digits between 1 and 9 or the letter N, in your signal will be interpreted as the signal report. (there is logic that prevents your outgoing serial number to be misinterpreted this way ...)
- <SRX> serial number received, up to 6 digits, only in contest mode
- <STX> serial number sent, automatically incremented when a record is stored, only in contest mode
- <OPERATOR> the call of user 1 or 2 when the log is exported.
- <NOTES> "DUPLICATE" will be shown as an ADIF note if a previous QSO with this station was found in the log.

A log record is stored if a call has been entered and the prosign <sk> is sent with your paddle, or the character # is detected in a message. **If you have a full size keyboard, pressing the right shift key will store the log record, too – this allows you to log SSB contacts without touching a paddle.** When the record has been stored, the keyer will sound a beep, and there is logic that prevents it from being stored for a second time. Once you exceed 11990 records, the keyer will beep twice when it stores the record to warn you that you are reaching the capacity limit. Trying to store more than 12,000 records results in a fatal error ERR 03.

The **SRX and STX tags** will only be created if the QSO was recorded in **contest mode**. They are mutually exclusive with the TIME\_OFF tag.

The OPERATOR tag is used to identify user 1 or 2 by call. The actual call is **not** stored in the log record, and **if it has changed between the creation of the log record and the export to ADIF, the ADIF record would be incorrect.**

### ***Entering CALL, NAME, QTH, COMMENT and QSL\_VIA***

You enter information into the log by sending it with your paddle or entering it with the keyboard, and then hitting a keypad key as described further down. This information entry can happen “in flight”, while your transmission actually goes out on the air, or it can be done in quiet mode (toggled with the NumLock key) When you hit the keypad key, the last word that you have sent is stored in the log record, and the whole log record is finally saved when you send <sk> or enter #.

The log record contains one field of 27 characters that may contain up to three items of variable length. The first item is always the **CALL** of the other station, which is entered with the **Enter key** on the numeric keypad or keyboard. A call can have a maximum of 13 characters. If you have not ended the QSO yet or cleared the QSO information with the “-” (minus) key on the keypad, successive **Enter** keys will *change* the call for the current QSO.

The remainder of this field can be used to store NAME, QTH, COMMENT, and QSL\_VIA information by hitting the “+” (**plus**) key on the numeric keypad. In a contest most likely the name will not be exchanged, and the information that you store with the “+” key will always be reported with the ADIF **COMMENT** tag if the QSO was recorded in **contest mode**. Hitting the “+” (plus) key several times during the course of a single contest QSO will *change* the COMMENT. The maximum length of this information is determined by the length of the call. You have to imagine that there is a single field of 27 bytes which contains the call at the beginning, then a separator character, and then the COMMENT. So, if the CALL has, e.g., a length of 6 characters,  $(27-6-1) = 20$  characters would be available for the comment, and any excess would be cut off.

In **non-contest** mode the bytes after the CALL can store **two** information items which are entered in round-robin fashion by successively hitting the “+” (plus) key. Normally, unless you use special prefix characters (see below), the first item will be the **NAME**, and the second item the **QTH**. After entering the CALL with the Enter key, the NAME would be stored if you hit the “+” (plus) key for the first time, and the QTH if you hit the “+” (plus) key for the second time. If you hit the “+” (plus) key for a third time, the NAME would be changed, if you hit it the fourth time, the QTH would be changed, and so on. Whenever you enter or change the CALL with the Enter key, the “+” (plus) key will be reset to enter the NAME next. The length of the combined NAME and QTH information is, again, limited by the fact that all three items, CALL, NAME, and QTH must fit into 27 bytes with a separator character between them – so the combined length of CALL+NAME+QTH is limited to 24 characters.

This “round robin” approach of letting the “+” key enter the NAME and the QTH leads to one issue: what if you want to correct the NAME without entering a QTH, or what if you already have the NAME from a previous QSO in the log and want to just enter or correct the QTH? If the last character that you enter before you hit the “+” (plus) key is the prosign <bt>, represented by the character “=”, then nothing is stored or changed, but the internal “round robin” toggles from storing the name to storing the QTH and vice versa. (as a mnemonic: “=” means “leave the same”)

If you have entered a NAME or a QTH and decide that you just want to delete it, enter a “?” (question mark) with your paddle or the keyboard and hit “+”. The “?” as a last character removes the corresponding item from the log record. (as a mnemonic: “?” means “unknown”)

In order to store information other than NAME and QTH, special prefix characters are defined. If a word **starts** with a letter, it will be shown in ADIF as the **NAME** (first item) or the **QTH** (second item), if it **starts** with a “/” (**forward slash**) it will be shown as **QSL\_VIA**, if it starts with a “:” (**colon**) it will be shown as a **COMMENT**.

### ***Characters With Special Behavior***

Several characters have special behavior that makes information entry even more versatile. The “,” (**comma**), the “.” (**period**), the “-“ (**hyphen, -....-**), and the “@” (**at-sign**) will never be preceded or followed by a space in the internal buffer even if you pause for longer than a word space before or after entering them, i.e., they will never break a string of characters into two words. In addition **the hyphen will be displayed as a space** rather than a “-“. This allows you to store a QTH like SANTA FE,NM by entering SANTA-FE,NM, and even if you

pause before or after the hyphen or the comma, this whole string will not be broken up into several words, and it will be considered one word that can be stored with the “+” (plus) key. When the QTH is shown in the QSO information display, the QTH will be properly shown as SANTA FE, NM without the hyphen. The behavior of the @ and the period is useful when you enter email an address.

In effect these four characters allow you to store even more than three information items by acting as a separator. But remember that the total number of characters for CALL, NAME, and QTH including the separators is limited to 27. If you exceed that limit the “tail” will be cut off.

The “ ` ” (**apostrophe .----**) will never be preceded by a space, i.e., it can never be at the beginning of a word.

To reduce mistakes when entering QSL\_VIA or COMMENT into a non-contest QSO the leading “/” (**forward slash**) that indicates QSL\_VIA information and the leading “:” (**colon**) that indicates a COMMENT will never be followed by a space, even if you pause for longer.

To correct mistakes when you are entering information, you can use the Back Space key on a keyboard (some numeric keypads also have a Back Space key). It will erase the last character in the internal buffer. **If you are using a paddle for data entry, the same function can be accomplished by sending a string of seven or more dits.**

## ***Duplicate QSOs***

Whenever a call is recognized, either automatically or by the \C command or the Enter key (explained further down), the log is scanned for a previous QSO with that station. In non-contest mode only the call is considered, and if a duplicate is found the name, QTH, and date of the most recent QSO can be displayed (this information is also sent to the CW Machine Manager if you are attached to a PC). If the call contains a “/” (forward slash) character, and the log contains a record with a call that is identical up to the “/” and not longer, then the calls are considered identical. The same applies if you entered a call and the log contains a record that has an identical call with a “/” suffix. Put simply: N2DE and N2DE/P will be considered a match, but N2DE/4 and N2DE/6 would not match. The part before the “/” has to be at least 4 characters. **This logic works only for call suffixes like /P or /MM; calls like W2/DJ8GO and DJ8GO will not be considered identical because the difference is in the prefix.**

In contest mode, in addition to the call, the following must also match to consider a QSO a duplicate: it must be a contest QSO, and the band, the mode (CW/SSB), and the user must be the same. This allows correct matching for

multi-mode contests where a station may be contacted once per band and mode. In technical terms: in contest mode the first byte of the log record explained in Appendix B must match in addition to the call for a QSO to be considered a duplicate.

### ***Checking, Erasing or Editing the last QSO in the Log: The <do> Pseudo Prosign and Scroll Key***

QSOs are stored in the log by the <sk> prosign and equivalent options in messages, as explained further down, or by the right Shift key on a full size keyboard. In some situations you may realize after the fact that information in the log was incorrect or that the QSO should be removed from the log. (Typical situations: you catch that rare one in a pile up, and you go through the brief exchange that stores the QSO – only to realize that he wasn't really responding to you but to someone else in the chaos. Or, maybe, he gives his call only once in a while, and you realize too late that you recorded the wrong call.)

In operational mode, and without leaving operational mode, you can check, erase or modify the last QSO in the log. **Log entries cannot be edited in contest mode.** EDIT mode is entered by sending the **pseudo prosign <do> ( -...--- as one character)** with your paddle or by pressing the **Scroll** key on a keyboard. This will copy the last record in the log into the internal record buffer, **erase it from the log**, and put you into quiet mode (keying off). You can now change the call, the name, the QTH, the received serial number, or the signal reports as described above (you are in quiet mode!), and **end your modifications with <sk> or the right shift key or the '-' (minus) key on the keypad**, which stores the modified record back. The previously recorded time stamps, the SSB/CW mode, and the user remain unchanged by this operation. **However, the band will be set to the band that you have currently selected – so you are able to change the band in the last log record.** At the start of EDIT mode the QSO information will scroll across the LCD, so you can use this to check the contents of the last log record. To prevent a loss of data you cannot leave EDIT mode without storing the QSO back with one of the keys mentioned above.

If you enter the <do> pseudo prosign or press the Scroll key while you are editing the last record, the process is repeated, and the information from the record that preceded the last one is now in the record buffer and that record is deleted. Since the tail record is always deleted from the log after it has been copied into the record buffer, **the last record is lost if you use <do> or the Scroll key while you are in EDIT mode.** Actually you can erase many records from the tail of your log by repeatedly using <do> or the Scroll key – so use this function with care.

## The Settings File

The settings file is an ASCII file that you create with a text editor like Notepad or Wordpad on your PC. You load it into the keyer by using a function in the MEMORY row as described above. **You should read this section even if you are using our CW Machine Manager program. Although it provides this function in a more convenient way, it is important to understand the underlying concepts.**

The settings file defines the name, the call, the QTH, and the messages for each user by using keyword parameters. These keywords are enclosed in angle brackets <> and can be anywhere in a line. The parameter value starts with the first character after the closing '>'. Anything before the first valid keyword tag in a file is treated as a comment. The name, call, and QTH keyword parameters have to be specified on one line. The message parameters can span multiple lines.

The keyer echoes each character from the file before it is stored into internal memory. If you don't see that echo, then the communication has failed - make sure that you have set your terminal program to the values given in the "Serial Communication" section. **The "<" character itself can only be used as a keyword delimiter and will never be stored in memory.**

The following keyword parameters are recognized. Upper and lower case characters are treated the same and can be mixed. The parameters can be specified in any order in the file.

- **<call1>**xxxxxxxxxxxx  
The call of user 1 or user 2 with a maximum of 19 characters.
- **<name1>**xxxxxxxxxxxx  
The name of user 1 with a maximum of 19 characters. Substitute a space in your name with a hyphen ("-").
- **<qth\_1>**xxxxxxxxxxxx  
The QTH of user 1 with a maximum of 19 characters. Substitute a space in your QTH with a hyphen ("-").
- **<call2>**xxxxxxxxxxxx  
The call of user 2 with a maximum of 19 characters
- **<name2>**xxxxxxxxxxxx  
The name of user 2 with a maximum of 19 characters. Substitute a space in your name with a hyphen ("-").

- **<qth\_2>**xxxxxxxxxxxxx  
The QTH of user 2 with a maximum of 19 characters. Substitute a space in your QTH with a hyphen (“-”).
- **<msg1n>**mmmmmmmmmm  
where n is a number between 0 and 9.  
One of the 10 possible messages for user 1, numbered from 0 to 9. A message can be any length as long as the combined length of all messages does not exceed 12,672 bytes including the invisible end character that is appended to every message.
- **<msg2n>**mmmmmmmmmm  
where n is a number between 0 and 9.  
One of the 10 possible messages for user 2, numbered from 0 to 9. A message can be any length as long as the combined length of all messages does not exceed 12,672 bytes including the invisible end character that is appended to every message.
- **<msg3n>**mmmmmmmmmm  
where n is a number between 0 and 9.  
One of the 10 possible messages, numbered from 0 to 9, that is used as a branch target with the **IC** and **IH** commands explained further down. A message can be any length as long as the combined length of all messages does not exceed 12,672 bytes including the invisible end character that is appended to every message.

The special messages for branch targets, msg3n, are not attached to a specific user so that buttons on the keypad are not being used up for message fragments that, by themselves, would not be meaningful. These messages cannot be reached directly through a button on the keypad but only through commands in other messages, and they will be referred to as **hidden messages**.

When you load a settings file, the **first tag erases all messages, calls, names, and QTHs** that may have been stored in the keyer. So it is not possible to load single element of a settings file without erasing everything else.

The call, names, and QTHs can also be set through keypad functions, as described under the menu functions. Messages, however, can only be stored by loading a settings file or by loading a profile from the CW Machine Manager.

## ***National Language Characters***

The CW Machine supports many national Morse characters. These characters are decoded and shown on the LCD when you enter them with a paddle, and if you use them in a message that you have created with a keyboard that supports these characters, most of them will be transmitted correctly. The LCD does not show these characters faithfully, but an attempt has been made to at least make them unique and recognizable.

Ä ( .-.- )	Ö ( ---. )	Ü ( ..-- )	Ñ ( --.--- )
Å ( .-.-. )	Ç ( -.-.. )	È ( .-.- )	É ( ..-.. )
Å ( .-.-. )	Æ ( .-.- )	Ø ( ---. )	Ð ( ..-.. )
þ ( .-.-. )			

If you look closely, you can see that these encodings are not unambiguous. Obviously **Ä = Æ**, **Å = Å**, and **Ö = Ø**. The CW Machine always echoes the first (**ÄÅÖ**) to a terminal program. Our CW Machine Manager lets you choose whether you want to display the German/French characters **ÄÅÖ** or the Nordic characters **ÆÅØ**.

The characters with a circumflex (^) are actually not encoded in a single byte, and you cannot store them in a message; but when you enter them with a paddle, they are echoed to the terminal program as the lower case character without the circumflex.

In addition the international character for **ch** ( ---- ) is supported. Since it does not have a single key on a keyboard, it has to be substituted in messages by another character that is not used in Morse code. The CW Machine uses the \* (asterisk) character for that purpose.

The German QTH of Munic, e.g., could be entered as **MÜN\*EN**, and when the message is sent the \* will be translated to ---- , creating **MÜNCHEN** .

## ***Prosigns and Commands in Messages***

Messages can have embedded instructions for the keyer. These are essentially of two types, one called commands, which contribute to the great flexibility of the CW Machine, and the others which are substitutes for operational prosigns used in a QSO. The typical use of the commands and their interaction with keypad actions is illustrated for various scenarios in the “On the Air” section.

The operational prosigns, usually represented as two characters that are sent as one, and their substitution characters are:

- = : is <bt> -...-
- > : is <bk> -...-.-
- + : is <ar> .-.-
- ( : is <kn> -.-.
- & : is <as> .-...
- % : is <ka> -.-.-
- ^ : is <ve> ...-.
- # : is <sk> ...-.-

**The # sign has two functions:** if it is encountered in a message and there is a log record in the keyer that has not been stored, it will be stored in the log and the operation is confirmed with a beep – this is identical to the operation that happens when you send <sk> with your paddle, except that the # will not cause the keyer to transmit a <sk>. If, however, there is no log record to be stored and a # is found in a message, then the keyer will send <sk>. So, to end a QSO by storing the log record and sending <sk>, you have to use two successive ## in a message. These functions were separated to allow you to store a QSO without transmitting <sk>, which is typical in contest situations or in pile ups.

**Commands** all start with a backslash '\', they can be upper or lower case, and they can be embedded anywhere in a message. These are the commands and their functions:

- **\A**            **Abort** message and clear the log record if a match condition exists. Typically used in contest exchanges, as illustrated further down.
- **\B**            **Break** (interrupt) the message. The “.” (decimal point) key on the keypad allows you to resume the message after the break. A message can also be interrupted at any point by just tapping the paddle or pressing a keypad key. If you are using a keyboard you can enter text into the type-ahead buffer while the message that contains the \B is being transmitted. When it reaches the \B, the contents of the type-ahead buffer will be inserted, and the message will automatically resume. Think of the B as a mnemonic for Buffer in that case (rather than Break)
- **\C**            this is one of the most powerful features of this keyer, and it combines several functions (all starting with **C**): copy, check, call.

This is what \C does:

- if the call of the other station **is** already known, it inserts that call into the message.
- if the call is **not** known yet, it:
  - takes the last word in the Morse buffer and stores it as the other station’s call. (now it’s “known” for this QSO) The maximum length of a call is 13 characters.
  - inserts the current time as the start time into the log record
  - **if the SEARCH option is enabled**, it checks the log for a previous QSO according to the rules explained in the “Duplicate QSOs” section further up, and emits a beep which indicates whether a QSO was found or not.
  - if a previous QSO with this station was found, the name and the QTH from that QSO are copied to the new log record
- **\D**            speed **D**own to normal after a \U. \U and \D are typically used to speed up part of a contest exchange.

- **\Gn**            n=0,...,9 **G**oto message number **n**. This ends the current message and continues at the beginning of user-specific message **1n** or **2n**, depending on the currently selected user.
- **\Hn**            n=0,...,9 **G**oto **H**idden message number **n**. This ends the current message and continues at the beginning of hidden message **3n**.
- **\I**                **I**nsert the call of the current user (user 1 or user 2) [ just a remark: you don't have to create a message just to send your own call. The "." (decimal point) key on the keypad does that. ]
- **\Jn**            n=0,...,9 **J**ump to hidden message number **n** if a previous QSO is in the log. If a previous QSO is found this ends the current message and continues at the beginning of hidden message **3n**, otherwise the command is ignored.
- **\Knnn**          **K**eydown for **nnn** seconds where **nnn** must be an integer with up to three digits, not exceeding 255. If **nnn** exceeds 255, it will be set to 255. The real time clock is used to count the seconds. The actual keydown time may be up to one second shorter and will never exceed nnn seconds. This command can be used for beacon operations or measurement sequences which require a keydown period. In combination with the **\W** command it could also be used to create really slow QRSS signals. The character **C**, e.g., with a speed of 5 mpw (minutes per word = 0.2 wpm) would be created by:  
  
                          **\W1\K18\W6\K6\W6\K18\W6\K6\W18**  
  
(the leading **\W1** makes sure that the keydown starts at the next full second of the real time clock and is the full 18 seconds)
- **\L**                **I**nsert the QTH (**L**ocation) of the current user
- **\M**                **I**nsert the name (**M**y name) of the current user

- **\N** insert the **N**ame of the other operator. It could be known from a previous QSO with this station or have been entered during the current QSO using the + (plus) key on the keypad. If no name is known, or the internal name field does not start with a letter, the word **OM** will be sent.
- **\O** quiet mode (switch keying **Off**) You use this when you know that your typical next action requires keying to be off (e.g., entering the name of the other operator) Keying can be turned back on by keypad actions, as explained below.
- **\P[s][%|&|^]** insert the date of a **P**revious QSO with the other station, embedded in the optional string s. If no previous QSO was found in the log, the command is ignored. A “-”(hyphen) in the string is replaced with a space when it is sent; so that it can contain several words. Three different place holder characters, each representing a particular date format, “%”, “&”, or “^”, in the string mark the place where the date should be inserted. A “%” formats the date as **YYYY-MM-DD**, a “&” formats the date as **DD.MM.YYYY**, and a “^” formats the date as **MM/DD/YYYY**. If no place holder character is found in the string, then the date is appended to the string as YYYY-MM-DD. For example, if the last QSO was on May 14, 2007, the command **\POUR-LAST-QSO-WAS-ON** would send **OUR LAST QSO WAS ON 2007-05-14**, and the command **\PON^WE-HAD-A-QSO** would send **ON 05/14/2007 WE HAD A QSO**.
- **\Q[s][%]** insert the **Q**TH of the other station, embedded in the optional string s if the QTH is known; otherwise the command is ignored. A “-”(hyphen) in the string is replaced with a space when it is sent; so that it can contain several words. A “%” in the string marks the place where the QTH should be inserted; if no “%” is found, the QTH is appended to the string. For example, **\QHW-IS-WX-IN%?** would send **HW IS WX IN DALLAS ?** if the QTH of the other station is **DALLAS**.

- **\Rnnn** Repeat message after a delay of **nnn** seconds where **nnn** must be an integer with up to three digits, not exceeding 255. If **nnn** exceeds 255, it will be set to 255. The real time clock is used to count the seconds. The actual delay may be up to one second shorter and will never exceed nnn seconds. If 255 seconds is not long enough, you can precede the \R with one or more \W c-ommands to create very long delays. If \R is used in a hidden message, it will start the repetition at the beginning of the hidden message.
- **\S** insert current **S**erial number. Serial numbers are sent with at least 3 digits. 0 (zero) is sent as T. (9 is **not** sent as a N)
- **\T** set current **T**ime as the start time into the log record
- **\U** speed **U**p by about 50% (typically used in contest exchanges for 5NN – back to normal speed with \D)
- **\Wnnn** **W**ait for **nnn** seconds where **nnn** must be an integer with up to three digits, not exceeding 255. If **nnn** exceeds 255, it will be set to 255. The real time clock is used to count the seconds. The actual wait time may be up to one second shorter and will never exceed nnn seconds. This can be used for beacon operations or measurement sequences. (see also explanation of the \K command) Using several \W commands in a row can create message delays of any required length.
- **\Z** ZAP – reset log record; similar to ‘-‘ (minus) key on keypad

These commands may look a little intimidating if you are not a programmer. They actually form a “programming language” that let’s you customize the response of the CW Machine in a way that minimizes actions with the paddle or keypad. Their use should become clearer when you take a look at the scenarios in the “On the Air” section. And, of course, you don’t have to use commands in messages at all. You can build your messages step by step, adding commands later as you become more comfortable with their use.

## Keypad and Keyboard Functions

The numeric keypad can be either a separate numeric keypad, or the numeric keypad side of a full-size 101-keyboard. The CW Machine recognizes scan codes (= physical keys), not characters, sent by a keypad/keyboard. If you are using a full size keyboard, then it is important to realize that the keys on the numeric keypad and similar keys on the keyboard may not be the same, because they have different scan codes. For example, the number “1” key on the keypad can start a recorded message, while the number “1” key on the keyboard above the letters does not have that function. When you enter a call with the keyboard, like N2DE, you have to use the ‘2’ key above the letters – the ‘2’ key on the keypad side would start message number 2.

Many keys on the 101-key PS/2 keyboard behave differently than they would when it is attached to a computer. The letter keys always produce upper case letters; so there is no need to use the shift keys, and actually the **shift keys serve a very different purpose (!)**. This is the keyboard map for the CW Machine – it is similar to a US keyboard layout:

Esc													
as	1	2	3	4	5	6	7	8	9	0	-	=	Error
bk	Q	W	E	R	T	Y	U	I	O	P	(	)	/
kn	A	S	D	F	G	H	J	K	L	:	'	Enter	
ar	Z	X	C	V	B	N	M	,	.	?	sk		
Space													

To enter a forward slash (/), like in N2DE/QRP, **you have to use the backslash key ‘\’ of a US keyboard – be careful to not use the forward slash key since it produces a question mark.**

The **Esc** key on the keyboard behaves differently depending on the state of the CW Machine. If the CW Machine is idle, it will start a command to change the band setting or activate a tuning mode like the **<dm> pseudo prosign** (see Band Selection and Tuning Functions); but when a message is in progress it will cancel that message (also described below).

When you start typing on a keyboard and you are not in silent mode (see the description of the **NumLock** key below) the CW Machine will start transmitting. Your keystrokes will be entered into a 100-character type-ahead buffer; so if you are not typing much faster than the actual transmission speed you will never exhaust that buffer (if you do, there is a beep and the keystroke is not accepted), and you will send perfectly timed CW even if your typing speed is uneven.

When you type on the keyboard in silent mode (keying off), the key strokes are entered into the Morse buffer without being sent. You can use this feature, e.g., to check the log for a call without sending that call and several other functions.

The **Backspace** key serves as an **Error** correction key. If you are typing ahead into the type-ahead buffer, and the preceding character has not been sent yet, it will just be removed from the buffer. If the actual transmission has "caught up" to your typing however, in other words, the type-ahead buffer is empty, then this key will transmit a string of 7 dits. (The "official" definition would require 8 dits or more, but the CW Machine is limited to characters with a maximum of 7 elements – so this is a minor departure from perfect Morse which should not cause problems.)

### ***Switching the Keying Function On or Off [ NumLock ]***

This function of the NumLock key is only available in **CW mode** while the CW Machine is idle. Use the NumLock key of the numeric keypad to toggle the transmitter keying function. When it is enabled, there is an up-arrow in position 2 of the display. During an ongoing message this key cancels the message as explained further below.

You can disable the keying of your transmitter for silent keying practice and other functions that we'll discuss further down. Since you'll probably do this frequently while in operational mode, it is done with a dedicated key, and there is no corresponding menu function.

### ***Entering the Sent Signal Report for SSB [ NumLock ]***

This function of the NumLock key is available only in **SSB mode**. (In CW mode the NumLock key toggles the keying function, which is always off in SSB mode.)

Press the NumLock key on the numeric keypad. The screen will go blank, and you can enter the sent RS with the number keys on the numeric pad or the keyboard. It expects 2 digits larger than 0, and the first digit cannot exceed 5. After the last digit, press the Enter key to store the RS. If you press Enter with an empty screen, nothing will be stored.

You can clear the screen by pressing the “-“ (minus) key on the keypad or keyboard.

The log record always defaults to 59 for SSB if you don't enter a signal report. The sent RST for CW is taken from the data that you send with your paddle – there is no need, or possibility, to enter it with the keypad.

In CW mode you don't have to enter the outgoing signal report since the CW Machine will automatically detect it in your transmission.

### ***Toggling the User [ / ]***

The keyer supports two “users”. A user has a call and a name that can be loaded with the settings file as described further up, and a set of up to 10 standard messages that are also loaded with the settings file. Often the second user is not really another operator. You could establish yourself as a second user with a set of messages suitable for contest operation, or you could have yourself as a second user with a /QRP suffix on your call and messages for QRP operation, or, maybe you want messages in a second language.

The current user is shown by a small number in the top-row of the LCD display. If you are not in contest mode you can change the user instantaneously with the ‘/’ (forward slash) key on the keypad. If you want to change the user in contest mode, you have to temporarily disable contest mode, toggle the user, and then re-enable contest mode.

### ***Entering the Received Serial Number [ / ]***

This function of the “/” (forward slash) key is only available in **contest mode**; in non-contest mode this key toggles between user 1 and 2. Press the “/” (forward slash) key on the numeric keypad. The screen will go blank, and you can enter the received serial number with the number keys on the numeric pad or keyboard. You can enter up to 6 digits. After the last digit press the Enter key to store the serial number. If you press Enter with an empty screen, nothing will be stored.

If you made a mistake, you can clear the screen by pressing the “-“ (minus) key on the keypad or keyboard.

## ***Entering the Received Signal Report [ \* ]***

Press the '\*' key on the numeric keypad. The screen will go blank, and you can enter the received RS(T) with the number keys on the numeric pad or keyboard. It expects 3 digits for CW QSOs or 2 digits for SSB QSOs, and the first digit cannot exceed 5. After the last digit press the Enter key to store the RS(T) . If you press Enter with an empty screen, nothing will be stored.

If you made a mistake, you can clear the screen by pressing the "-" (minus) key on the keypad or keyboard.

The log record always defaults to 599 for CW and 59 for SSB if you don't enter a signal report.

## ***Starting or Queuing a Message [ 0 ... 9 ]***

This function is only available in **CW mode**. Pressing a number key on the numeric keypad starts the corresponding message. If no message corresponding to that number was loaded with a settings file or with the CW Machine Manager program, nothing will happen.

If you press a number key while another message is still in progress, the corresponding message will be started after the ongoing message is finished. You could even press several number keys during a message, and the corresponding messages will be appended to the ongoing message.

## ***Interrupting and Resuming a Message [ . ]***

While a message is being sent, it can be interrupted by tapping either side of the paddle or by pressing the '.' (decimal point) key on the keypad. These two types of interruption allow you to resume the message by pressing the '.' (decimal point) key on the keypad again. You can also interrupt a message by pressing the "-" (minus) or NumLock key on the keypad, or the ESC key on the keyboard, but you will not be able to resume at the point of interruption in that case. This function is only available in **CW mode**.

A "message" in this context means either a stored message that was started with one of the number keys on the keypad, or some text that was sent from the type ahead buffer.

## ***Sending Your Own Call [ . ]***

In addition to interrupting and resuming messages, the '.' key on the keypad has a third function: if you're not in a state where a message has been interrupted, it will send your call. This is handy in pileups where you just want to inject your call and in other instances where you want to send your call. This function is only available in **CW mode**.

## ***Starting the 10 Minute Id Timer [ . ]***

In **SSB mode** the Morse functions of the '.' (decimal point) key are not enabled. Instead it is used to start a 10 minute id timer. The countdown is started when you hit the "." (**decimal point**) key, and it will ring an alarm every 10 minutes from then on. If you hit the "." key during a countdown period, it starts again with 10 minutes on the clock. The countdown is cancelled if you use the keypad/keyboard or the paddle, and you will have to restart it with the "." (decimal point) in that case.

## ***Cancelling Messages and Clearing the Log [ -, ESC, NumLock]***

The '-' (**minus**) key or the **NumLock** key on the keypad, or the **ESC** key on the keyboard will stop an ongoing message. Unlike the '.' (decimal point) key these keys will not allow you to resume the message at the point of interruption. The '-' (minus) key will also clear the current log record. Think of it as the "C" key that you have on calculators. **It is important to use the "-" (minus) key if you have entered information for a QSO, say the call and the name/QTH, and decide to abort that QSO without storing it. If you just enter a new call with the Enter key, the old QSO information would still be in the log record and only the call would be replaced, and the previous name/QTH could be stored with the wrong call.**

The Numlock key or the ESC key just stop an ongoing message and erase the checkpoint for messages in progress; so you **cannot resume** the message with the '.' (decimal point) key on the keypad, but they leave the log record intact. Pressing the '.' (decimal point) key on the keypad will send your call after you have pressed ESC or NumLock to stop a message.

When entering signal reports or serial numbers, pressing the "-" (minus) key will only clear the screen and not affect the other entries. (Think of it as the "CE" key that you have on some calculators)

In QSO edit mode the '-' (minus) key has a special function: it stores the (modified) QSO information back into the log, just like <sk> or pressing a Shift key on a full keyboard would.

## ***Entering and Checking the Call of the Other Station [ Enter ]***

When you press the Enter key (either on the numeric pad or the keyboard), the last word in the Morse decoder buffer will be taken as the call of the other station and, **if the SEARCH option is enabled or keying is off**, it is checked against the log. In addition, this moment will be recorded as the QSO start time in the log record. **If a non-contest QSO is already in progress, the Enter key just changes the call** without affecting anything else in the log record that is not yet stored. The maximum length of a call is 13 characters, and the first 13 characters of the last word will be used if it is longer. This is similar to the function of the \C command in messages, and to the function that is automatically performed when automatic logging is enabled (A-LOG). You can do this, without interrupting your flow, while sending a response with the paddle that contains the call. At the end of the search one of two beep sounds will indicate whether a QSO was found or not. If a previous QSO was found, the operator's name and QTH of the **most recent** QSO are copied into the current log record. (i.e., the log is searched backwards for a previous QSO)

Usually you would use this function to check a call that you are hearing on the air to determine if you already had a QSO with her/him. Since you don't want to send out the call while you are entering it, you switch to quiet mode (keying off) with the NumLock key, enter the call with your paddle, and press Enter. You could also enter the call using the letter and number keys on the keyboard side of a full-size keyboard. If you are in non-contest mode with keying off when you hit Enter, and a match is found, the other operator's name, QTH, and the date of the previous QSO will be displayed. If no name/QTH was recorded, the call will be displayed instead of the name. A match in contest mode will just sound the beep without displaying details of the previous QSO.

Pressing any message key will turn quiet mode off (keying on) – so you don't have to press NumLock again if you want to respond with a recorded message. Since the call is now "known", a \C in messages will be substituted with it from now on. In contest mode, however, if this was a duplicate, the \C would abort a message containing it and the call would not be available.

## ***Entering the Name or Other Information [ + ]***

When you press the '+' key on the numeric keypad, the last word in the Morse decoder buffer will be stored as the name or QTH in the log record. (Please read the section on the Log again for a more detailed explanation of the logic) You can do this, without interrupting your flow, while sending a response with the paddle that contains the name or QTH you want to store.

As with the call, you can also enter the name or QTH into the Morse decoder buffer in quiet mode or with the keyboard before you press '+'. The information immediately stored after the call may not always be the name of the other operator. If it starts with something that is not a letter [A...Z], the \N command in messages will treat it like an empty field and substitute OM for it. You could, for example, store "/EA9AC" in a QSO with EA9EU, and this would be shorthand for "via EA9AC".

In contests, where a name is usually not exchanged, you can use this field in the log record to store any information that contains letters and is not just a serial number. Therefore, when a log record that was stored in contest mode is sent to the PC in ADIF format, the contents of this field will **always** be shown with the **COMMENT** tag. In non-contest mode, if the word it starts with a letter, it will be shown as the **NAME** or **QTH**, if it starts with a "/" (forward slash) it will be shown as **QSL\_VIA**, if it starts with ":" it will be shown as a **COMMENT**. A "-" (hyphen) will be rendered as a space when the information is exported in ADIF, or the name or QTH are inserted into messages with the \N or \Q commands.

As explained above in the section describing the logging logic, pressing the "+" several times during a non-contest QSO allows you to store two pieces of information in "round" robin fashion; in a contest QSO only one word can be entered.

If the last character that you enter before you hit the "+" (plus) key is the prosign <bt>, represented by the character "=", then nothing is stored or changed, but the internal "round robin" toggles from storing the name to storing the QTH and vice versa. (as a mnemonic: "=" means "leave the same")

If you have entered a NAME or a QTH and decide that you just want to delete it, enter a question mark (?) with your paddle or the keyboard and hit "+". The "?" as a last character removes the corresponding item from the log record.

## ***Those Multi-Function Keypad Keys ...***

The number keys on the keypad are disabled in SSB mode since they only provide Morse code functions.

All but three of the other keys on the numeric keypad have the same function regardless of the operational mode of the keyer. Since there are not quite enough keys to support all necessary functions, three of the keys, the two top left keys on the keypad, **NumLock** and **"/" (forward slash)**, and the **“.” (decimal point)** change roles with the operational mode.

In CW mode, the sent RST is recognized automatically in your outgoing transmission. That obviously cannot be done in SSB, and therefore we have to use a key to enter the report. Since the keying on/off function is meaningless in SSB – it’s always off – the key that toggles it in CW mode, **NumLock**, is used in **SSB mode** to enter the **RS signal report** of the other station.

The functions of the **“.” (decimal point)** to send your call or to stop and restart messages are not meaningful in SSB mode. In SSB Mode it starts the **10 minute id timer** instead, as explained above.

In **contest mode** a **received serial number** must often be entered. Since you are not likely to change the user frequently in a contest, the key that toggles the user in non-contest operation, **"/" (forward slash)**, is used for that purpose. If you do want to change the user during a contest, you have to leave contest mode, change the user, and then re-enable contest mode.

## ***Embedding of Messages***

When you type some text on the keyboard into the type-ahead buffer, and you hit one of the number keys on the numeric keypad that start a message, or the [Enter] key or the [+ ] key which have other functions described above, the corresponding action will be performed when that point in your outgoing message has been reached. In other words, you can embed a recorded message into a message that you are typing in by using a number key on the numeric pad. After that embedded message has ended, the transmission will continue with more text from the type-ahead buffer.

Conversely, the \B command in recorded messages allows you to insert typed text into a recorded message. If you start a message that has a \B in it by hitting a number key on the numeric keypad, and you then proceed by typing text into the type ahead buffer while the first part of the message (before the \B) is being

sent, your typed text will be inserted at the point of the \B, and the transmission will then continue with the remainder of the recorded message after the \B.

Two typical examples illustrate this:

1. Assume you have the following recorded message assigned to the [2] on the numeric keypad:

T U FR QSO = UR RST \B = SO HW?

You hit [2] and the CW Machine starts sending T U FR QSO ... While the first part of the message is being transmitted you enter 579 579 on your keyboard, which will be automatically inserted at the point of the \B before the message continues. So the combined result will be:

T U FR QSO = UR RST 579 579 = SO HW?

2. Assume you have the following recorded message assigned to the [8] on the numeric keypad: \N It contains just one command as explained further up, and hitting the [8] will send the name of the other operator if it is known, or the letters OM. Assume that you are in a QSO with Fred, KT5X, and his name is already recorded (either in the log or with the [+] as explained above) You then start typing the following message: ([8] means the 8-key on the numeric keypad)

HELLO [8] = T U FR QSO

The action defined by the [8] will be performed at the appropriate point in the typed message, so the combined result would be:

HELLO FRED = T U FR QSO

At any point these messages can be interrupted by the [.] (decimal point) on the keypad or by tapping your paddle, and they can be resumed with the [.] (decimal point) on the keypad.

You can easily see that the combination of all these functions lets you create templates for QSOs which can be filled "in flight" to result in a truly individual QSO with the minimum number of keystrokes.

## On the Air

This keyer has many functions, and in all probability you'll discover ways to use it that I haven't thought about. The following examples are meant to give you an idea of the possibilities.

Without a doubt, you can develop settings that let you minimize and customize your actions in a way that suits your style. What we are really doing with a settings file is programming the keyer. In most cases there are several solutions, and in some cases probably even better solutions than what I am suggesting here.

Actions on the keypad are denoted by enclosing the key(s) in `[]` - so `[1]` means that you press the '1' on the keypad (don't enter the square brackets!), and `[/ 569 Enter]` means that you enter the sequence '/569' followed by the Enter key on the keypad. Characters that you enter with your paddle or keyboard are capitalized.

### *Non-Contest Usage*

This is a fragment of a settings file that could be used for non-contest style QSOs. It is used in the following examples to illustrate the operation of the keyer.

```
<Call1>n2de
<Name1>Ulrich
<QTH_1>Lagrange,-NY
<Msg10>\z cq cq dx de \i \i cq cq cq dx de \i \i + dx k \r8
<Msg11>\c\t de \i = t u fr qso dr \n \j0= \h1
<Msg14>> de \i \b \c de \i (
<Msg15>\c de \i = t u fr nice qso dr \n = 73 gl es hpe to cuagn = \c de \i + ##
<Msg16>> de \i t u ur 5nn in ny qsl? > \o\b#
<Msg17>\c de \i \i k \o
<Msg30> es gld to meet u agn = \h1
<Msg31>ur rst \b= my name is \m \m es qth is \L \L = so hw? \c de \i (
```

### **QSO with You Calling CQ**

You start by pressing `[0]`, which invokes `Msg10` and sends CQ DX in a continuous loop with 8 second breaks to listen for responses. Let's assume EA2BQ, Tony, responds to your call, and you have met Tony before (i.e., he is in the log already). You interrupt the CQ loop by tapping your paddle and respond:

## **EA2BQ [1]**

Which results in a beep (because a match is found in the log) followed by the first part of Msg11, which then transfers to Msg30 because of the match, and Msg30 chains to Msg31:

*ea2bq de n2de = t u fr qso dr tony es gld to meet u agn = ur rst*

You fill in the RST and resume Msg31 which was interrupted by \b:

## **579 579 [.]**

Which results in:

*579 579 = my name is ulrich ulrich es qth is lagrange, ny lagrange, ny = so hw? ea2bq de n2de <kn>*

The logic in the keyer recognizes the 579 that you entered as the outgoing signal report. (... if it is one word without intervening blanks !) Tony responds and gives you a report of 589, which you enter into your log:

## **[\* 589 Enter]**

At this stage all the information for the log has been collected. You respond to him:

## **[4]**

Which results in:

*<bk> de n2de*

You now continue with whatever you want to tell Tony, ending each round:

## **[.]**

Which results in:

*ea2bq de n2de <kn>*

and eventually you reach the final exchange:

## **[5]**

Which results in:

*ea2bq de n2de = t u fr nice qso dr tony = 73 gl es hpe to cuagn = ea2bq de n2de  
<ar> <sk>*

The first # in the message stores the QSO, and the second # sends the <sk>.

As you can see, the typical framework of a casual QSO and a log entry are created with very little effort on your part.

## **QSO with You Responding to a CQ**

Let's use the same settings file that we used for the previous example and see how we would respond to a CQ of a station that we contact for the first time.

You hear DJ8GN calling CQ. At this stage you have two possibilities to proceed:

- if you aren't sure whether you have met him before you could check the log by entering his call in silent mode with the paddle, or with the keyboard:

**[NumLock] DJ8GN [Enter]**

This enters his call for subsequent messages and searches the log. We assume the search comes up empty since we haven't met him before. If we had met him before, his name and the date of the most recent QSO would be displayed.

- or you could answer his call right away:

**DJ8GN [7]**

Which results in:

*dj8gn de n2de n2de k*

This enters his call for subsequent messages and searches the log. If we had met him before, the keyer would emit a beep. Also, the current time is recorded as the start time for the QSO (this is a bit premature and will be overwritten later on). If he never responds to you, you'll have to clear this information: **[-]**

Let's assume that DJ8GN responds and gives you a report of 579 and tells you that his name is Peter and his QTH is Hamburg. You enter that information for the log:

**[\* 579 Enter] PETER[+] HAMBURG[+]**

The final \o in Msg17 has put you into quiet mode. So the **PETER** and **HAMBURG** that you enter with your paddle will not go out on the air but just be entered into the Morse decoder buffer, so that the [+] can pick it up and put it into the log as the name and QTH. An alternative approach would be to not use quiet mode but respond to him with a transmission that contains his name and QTH, and, at the very moment you have sent the name/QTH, hit [+] “in flight” – that would also record his name and QTH in the in the log. Like:

t u fr dr peter[+] and the fb rpt fm hamburg[+]

Let’s assume, however, you have entered the information in quiet mode and respond with:

**[1]**

Which results in:

*dj8gn de n2de = t u fr qso dr peter = ur rst*

Activating a message terminates quiet mode, so this actually goes out. The actual QSO start time has now been recorded by the \t in Msg11, and it’s waiting for you to enter the signal report, say 579:

**579 [.]**

Which results in:

*579 = my name is ulrich ulrich es qth is lagrange, ny lagrange, ny = so hw?  
dj8gn de n2de <kn>*

Again, the keyer has collected all information for the log at this point, and you can proceed as in the previous example.

## **Jumping into a Pile-Up**

Again, let’s assume we have the same settings file used in the first example, and we hear A61Q on the air with the predictable pile-up. We inject our call at strategic points into the noise:

**[.]**

(Having been on the other end of a pile-up of that sort, I usually didn't like the guys who tried to dump over everyone else and gave their calls half a dozen times in a row, possibly prefixing it with my call – it's quite clear whom they are calling, so my call was hardly necessary :-))

Eventually he comes back and gives us a 599. We don't have to enter that into the log because it's the default for a new entry. So we just respond:

**[6]**

Which results in:

```
<bk> de n2de t u ur 599 in ny qsl? <bk>
```

After he confirms we still have to enter his call into the log and store the log record. He also has said that he accepts QSLs only direct, and we want to store that in the log, too. The \o in message Msg16 has put us into quiet mode, so our entering the call and other information will not be transmitted.

Let's enter the call first – this also establishes the current time as the start time for the QSO:

**A61Q [Enter]**

Now let's enter the QSL information and then resume the interrupted Msg16. It just uses # to quietly store the log record without sending <sk>.

**/DIRECT[+ .]**

This information is entered into the log with [+]. We start it with a '/' so that this will be shown in the ADIF log as QSL\_VIA and not as NAME. If we meet him again at a later time, the \N command in our messages will substitute OM for his name, and not /DIRECT, which would be unintentionally funny. The "/" has logic that prevents that there is a space after it, even if you pause longer after the "/", to make sure that /DIRECT stays a single word in the buffer.

During this QSO we have not entered a name. The consequence is that, if we meet A61Q again some time later and use the \n parameter in our opening message, it would be substituted by OM, and the display of the previous QSO would show /DIRECT. In such a situation, if OM were not appropriate, or we actually had his name, we could also store XYL or AMIGO or FRD or his actual name in the name field with a first [+], and the /DIRECT with a second [+].

## **Contest Usage**

Contests consist of short, formalized exchanges that can be highly automated with this keyer. The exchange, of course, differs with the contest, and you'll have to create a specific settings file (or profile in the CW Machine Manager) for most occasions. You may also want to export your current (non-contest) log to your PC for later restoration and reset the record count, i.e., delete the log, and reset the serial number to 1. And, of course, you must switch the CONTST option on.

Let's load a settings file that is suitable for a generic contest where a report and serial number are exchanged, and every station may be contacted once on every band. If we make this for user 2, then the following lines could be in the same settings file as the lines for non-contest usage above:

```
<Call2>n2de
<Msg20>\z\utest\d \i \r3
<Msg21>\c\j0 ur \u5nn\d \s qsl? >\b> cfm 73 #\g0
<Msg23>\a \i
<Msg24>\a > ur \u5nn\d \s qsl? >\b#\o
<Msg30>\z dup + \g0
```

## **You Sit on a Frequency**

If you switched the keyer to user 2 and are sitting on a frequency waiting for callers, your actions with the above settings file would start with invoking Msg20:

**[0]**

Which results in an endless loop with 2-3 second breaks to listen: (as explained in the description of \r, the break may actually be 2 seconds, but it is no more than 3 seconds)

*test n2de*

You'll notice that 'test' is speeded up by 50%

Let's assume that NØSS is answering, and he has a smart logger that made sure that this is no duplicate call. He is your number 78. So you answer to his call:

**NØSS [1]**

Which results in:

*n0ss ur 5nn t78 qsl? <bk>*

Again, 5nn is speeded up. Assume he confirms, and you were his number 91:

**[/91 Enter .]**

Which stores 91 as the serial number in your log record, and then responds:

*<bk> cfm 73*

The # in Msg21 stores the log record, and \g0 resumes your test loop. Actually, for this type of standardized exchange without variation you don't need a paddle at all. The only thing you entered with the paddle in the above exchange is the call of NØSS. Since the keys on a keyboard also enter letters and numbers into the Morse decoder buffer, you could just enter NOSS on your keyboard, and the results would be the same.

Let's assume that DJ8GO responds to your test call, and somehow he doesn't have a smart logger that detects that you have worked him before. Again, you would enter his call with the paddle or keyboard:

**DJ8GO [1]**

But the response would be:

*dj8go dup <ar>*

The \z in Msg30 clears the log record, and the \g0 resumes your test loop. Pretty simple, isn't it?

## **You Hunt**

When you are not sitting on a frequency but are hunting, the actions are a little different. You are hearing KT5X and you think that you have not logged him yet. So, check your log before you call (the NumLock puts you into quiet mode:

**[NumLock] KT5X [Enter]**

The keyer will beep if this is a duplicate. Once you have ascertained that you're not embarrassing yourself by contacting him for a second time, you inject your call until he responds:

### [3]

Using [3] instead of [.] to inject your call, more specifically the \a in Msg23, makes sure that nothing happens if you missed the beep indicating that he's a duplicate – so your call will not go out and result in a rejection, or, worse, a duplicate that has to be resolved later on. Assume he gives you a serial number of 321, and he is your number 288:

### [/321 Enter 4]

Which results in:

```
<bk> ur 5nn 288 qsl? <bk>
```

If he couldn't copy that and wants you to repeat, you just hit:

### [4]

It repeats the previous transmission. The serial number is still the same since the log record has not been stored yet. Once he confirms you hit:

### [.]

which stores the log record and puts you back into quiet mode for further hunting. His call was recorded in the log record by the initial search action that confirmed that he's not a duplicate. If he had been a duplicate, neither your call (Msg23) nor your response (Msg24) would have gone out because they are blocked by the leading \a in both messages. So the initial check for a duplicate is really quite important, but it's not wasted effort since you would have to enter his call anyway at some time during the exchange. Again, all you really enter with a paddle is the call, and you could do that with the keyboard as well.

If you never get a confirmation, and this exchange is not successfully concluded, you'll have to clear the QSO status with [-]

## Non-Numeric Contest Exchanges

If the contest does not require the exchange of a serial number, but of some other (non-numeric) information, like a grid locator, e.g., you would use the name field of the internal log record to store the received information. Remember, you enter something into the name field by putting it into the decoder buffer with the paddle or the keyboard and then hitting the **[+]** key on the keypad. When this field is exported to the PC it will be flagged with the ADIF COMMENT tag.

**You are, however, limited to a single “word” without intervening spaces, since the keyer logic parses the Morse decoder buffer and stores only the last word in this field. If you need a space in this information you should use the “-“ (hyphen) which will be rendered as a space in the ADIF translation of the log.**

## Appendix A: Error Codes

Some exceptional situations will create an error condition in the CW Machine. It will emit a beep and display an error code, ERR nn, where nn is a two-digit number. For fatal errors, your only recourse is to press the hardware reset button. Some errors are “soft” errors that allow you to continue without requiring a reset. These are the error codes:

- 00 fatal.** Internal state error – you should never see this.
- 01 fatal.** Oscillator calibration error. The software calibrates the internal oscillator of the MPU to 8MHz +- 1% when the keyer is reset. There’s little that can be done if this happens, except to try again. It may indicate a serious problem with your processor chip.
- 02 fatal.** EEPROM verification error. When the keyer is reset, parts of the internal EEPROM are formatted and verified. This error indicates an EEPROM failure. You can try again, but this probably indicates permanent damage to the processor chip.
- 03 fatal.** DataFlash capacity error. This happens if you are trying to store more than 12,000 records in the log. The last QSO record was not stored in the log, and you should export and reset your log as soon as possible.
- 04 soft.** DataFlash capacity error. This happens if you are trying to store messages from a settings file which exceeds the combined total of 12,672 bytes for messages. You can continue, but the message that caused the overflow will not be stored.
- 05 soft.** Import format error. The import file does not conform to specifications given in Appendix B – either there is a record that doesn’t have exactly 44 bytes, or there is a character in the input stream that is not a valid hexadecimal digit. Since the input is echoed to the PC screen while the file is being read, you can see exactly where the problem occurred. You can continue, but the log record count is reset to 0.
- 06 fatal.** USART buffer overrun. The PC sent data faster than acceptable for the keyer and data was lost. Since the keyer uses the XON/XOFF protocol to pace data coming from the PC, in all probability your terminal program either didn’t understand these signals, or they were lost in a poor cable connection. Make sure XON/XOFF is enabled in your terminal program and you are using a well-shielded cable.

## Appendix B: The Export / Import File Format

The Export/Import file is an ASCII file containing the hexadecimal representation of the internal log record, 2 characters per byte, one record per line. When importing it, no attempt at consistency checking is made – the only checks are for a line end (0x0D) after every 88 bytes (the internal record has a length of 44 bytes, represented by 88 characters in hexadecimal notation), and valid hexadecimal characters.

If you want to create an import file from some other data source, it has to have the exact layout that is produced by the export function, with one log record per line in the file. **BCD numbers start with the most significant digit:**

<b>OSCUNNNN</b>	1 byte: bit 7: always 0 - future use bit 6: 1=SSB, 0=CW bit 5: 1=contest, 0=non-contest bit 4: 1=user2, 0=user1 bits 0-3: band index: 0000=2m, ..., 1010=160m
<b>CC.....CC</b>	27 bytes: call, null terminated, maximum of 13 characters, name (optional, null terminated), QTH (optional, null terminated). A leading "/" in name or QTH would indicate QSL_VIA, and a leading ":" would indicate a COMMENT. In contest mode the space after the call is always interpreted as a COMMENT. The field should be padded with nulls. If the name or QTH fills the remaining space up to the 27 <sup>th</sup> byte, it does not require a terminating null.
<b>BBBB</b>	2 bytes: received RST in BCD notation
<b>BBBB</b>	2 bytes: sent RST in BCD notation
<hr/>	
<b>BB.....BB</b>	<b>in non-contest mode:</b> 6 bytes: end time in BCD notation SS seconds MM minutes HH hours DD day MO month YY year (20.. is implicit)
<b>BBBBBB</b>	<b>In contest mode:</b> 3 bytes: received serial number in BCD notation
<b>BBBBBB</b>	3 bytes: sent serial number in BCD notation
<hr/>	

**BB.....BB**

6 bytes: start time in BCD notation  
SS seconds  
MM minutes  
HH hours  
DD day  
MO month  
YY year (20.. is implicit)

For SSB QSOs the reports are only two digits (RS), and they are stored in BCD notation in the second byte.

**For dates from 1901 to 1999 the high bit in the first digit of the month is set.**

## **Appendix C: The Menu Structure**


The following pages show a pictorial representation of all menus and functions that you can navigate using the joystick.

The rectangular boxes represent a particular state that is shown on the display, the four lines leaving a rectangle correspond to the left – right – up – down movements of the joystick, and the circle on the rectangle represents the push-down action of the joystick.

## CW Machine Menu Structure

### Operational Mode


- All functions are display-only, no adjustments can be made
- Up / Down joystick acts like left / right paddle
- Joystick push for less than 0.25 sec adjusts LCD contrast
- **Joystick push for more than 0.25 sec leaves operational mode and puts keyer into adjustment mode (A)**
- Decoder display shows ticker tape of characters created in iambic/bug modes or entered on a keyboard.
- Serial # display is only visible if the contest option is on
- Info (name and date of last QSO) is only visible if the contest option is off and a previous QSO has been found

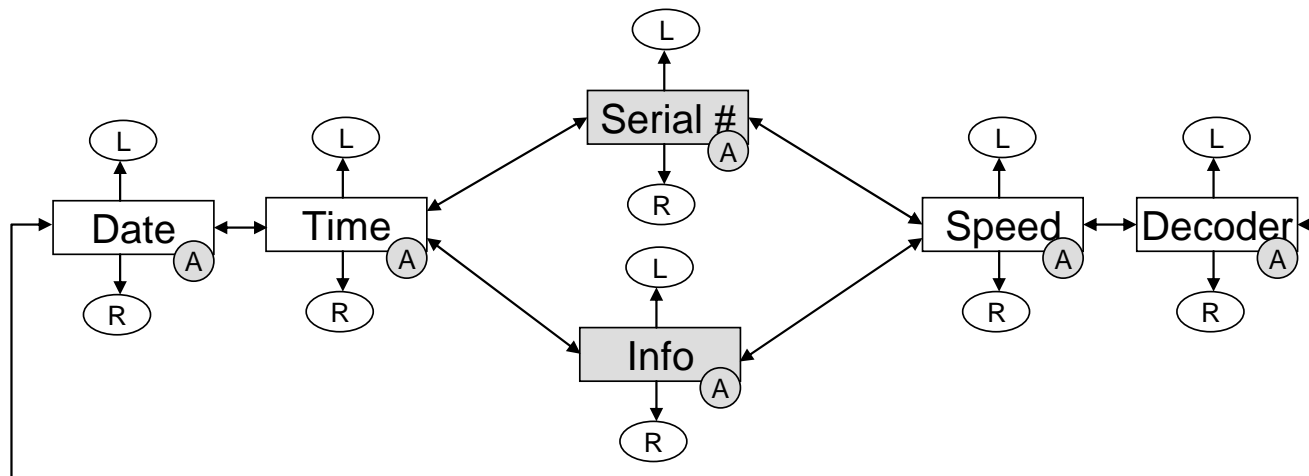

# CW Machine Menu Structure

## Adjustment Mode


Keyer can be put into **operational mode** by holding the left paddle or joystick for more than 0.3 seconds, or by pressing any key on the keypad or keyboard.

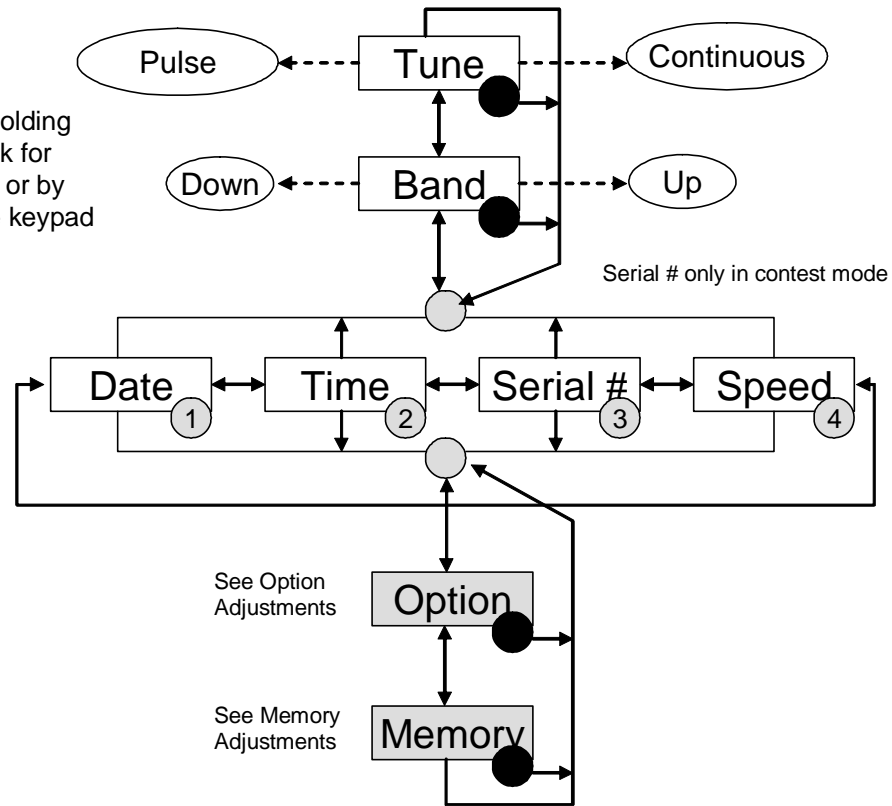




# CW Machine Menu Structure

## Adjustment Mode

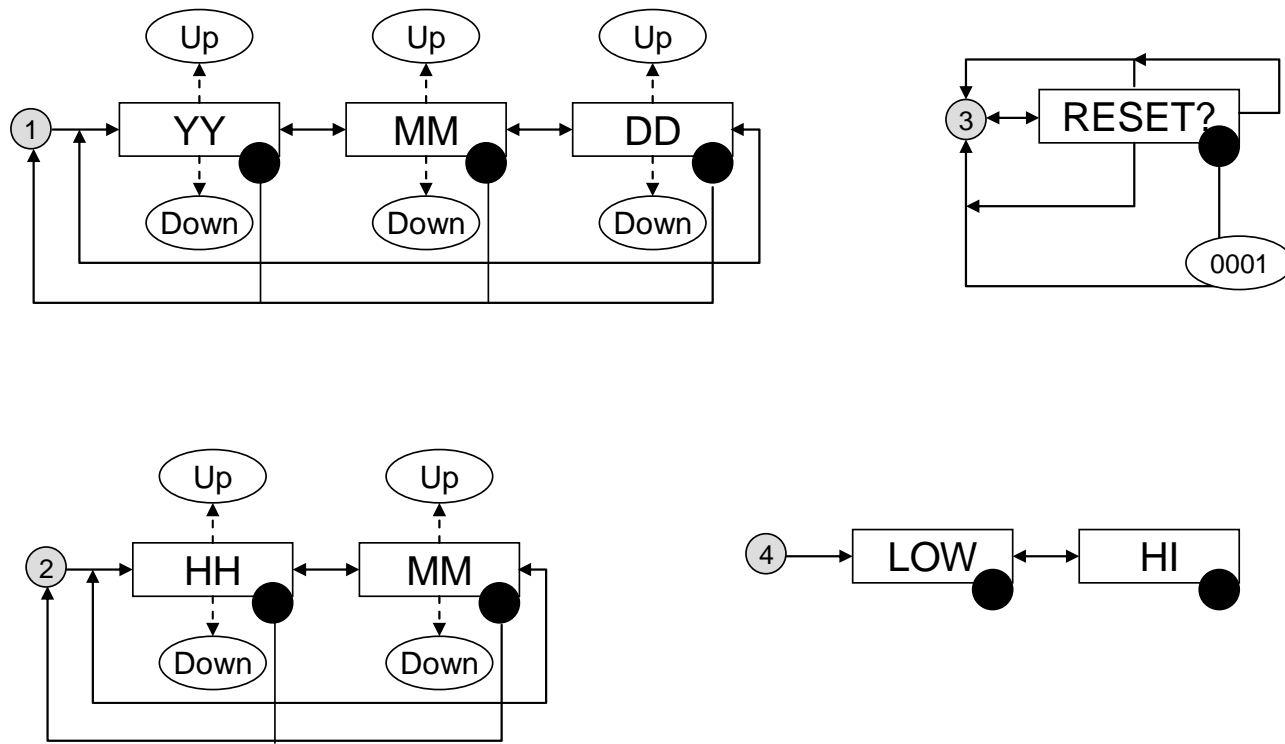


# CW Machine Menu Structure

## Option Adjustments

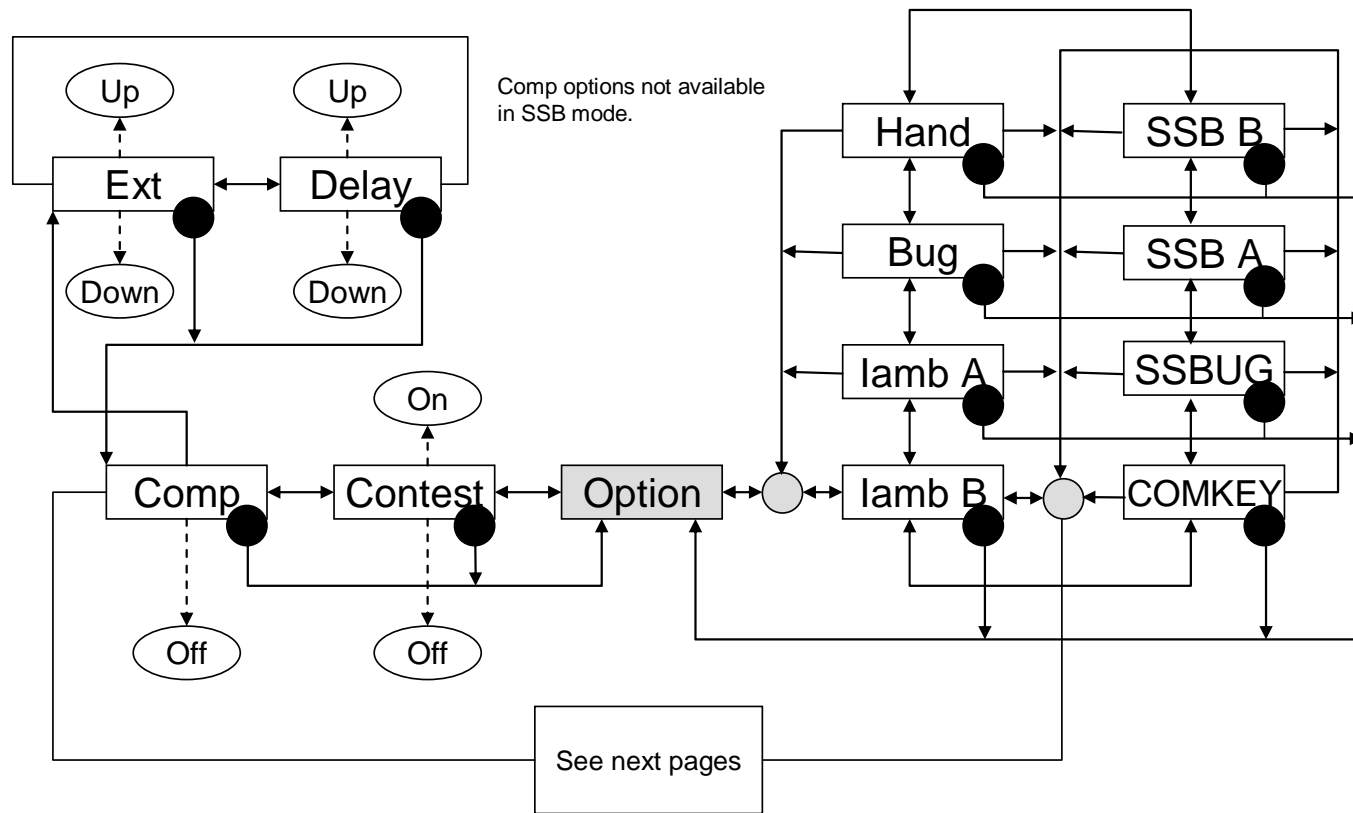


## CW Machine Menu Structure

### Option Adjustments

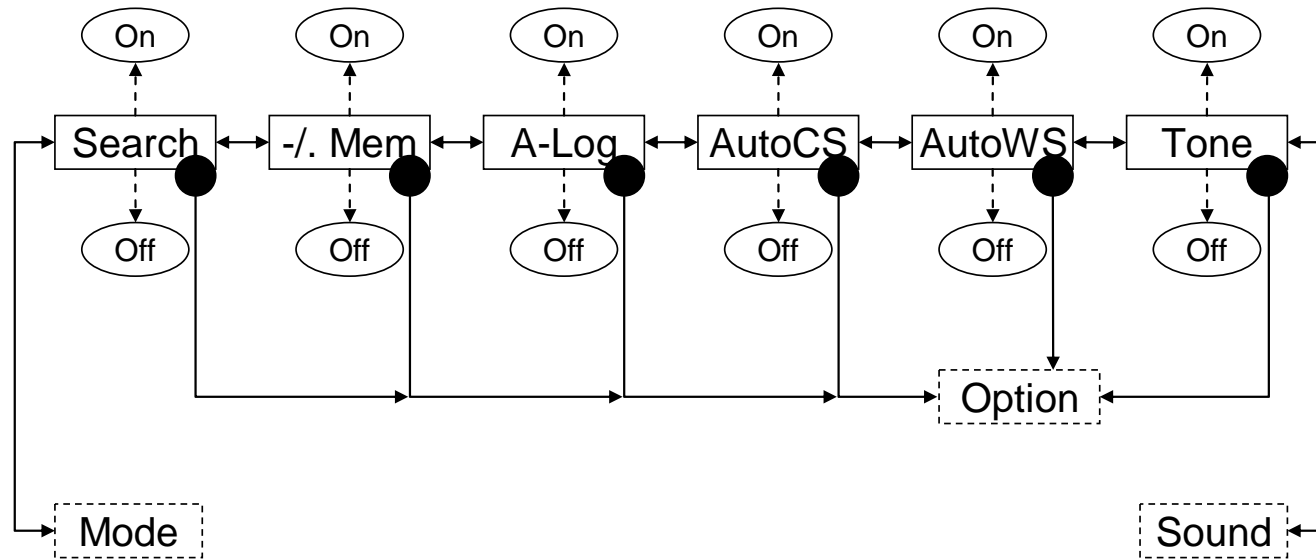


## CW Machine Menu Structure Option Adjustments

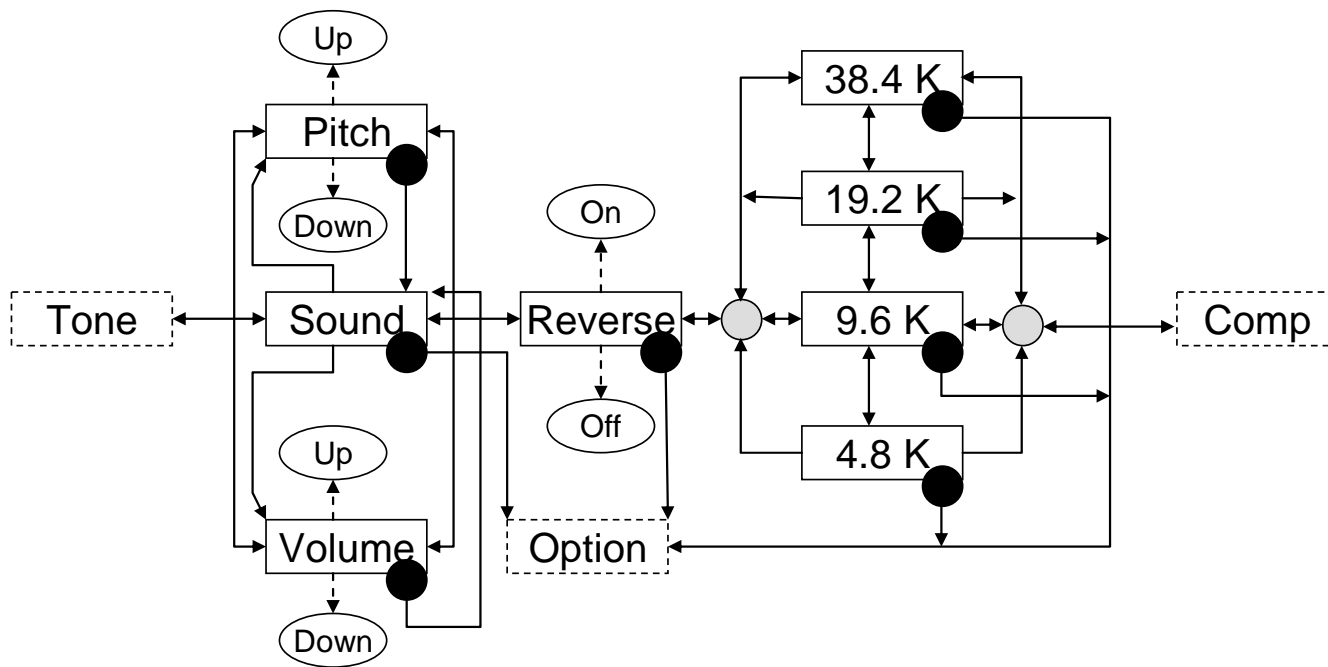

# CW Machine Menu Structure

## Memory Functions

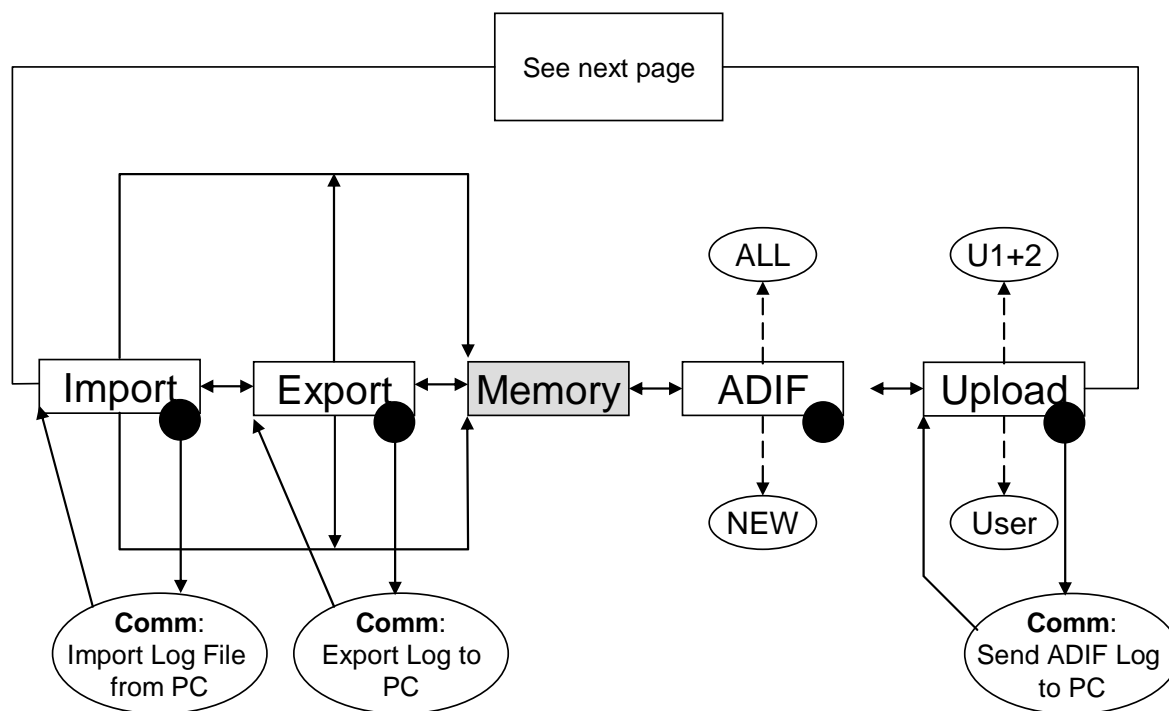

## CW Machine Menu Structure

### Memory Functions

